


Model 5866RT

Elastomer or Metal Sealed, Remote
Transducer, Electronic Pressure Controller/Flowmeter

Model 5866RT Pressure Controller/Flowmeter controls pressure while also measuring flow rate. The Model 5866RT receives a remote pressure transducer signal, and using adjustable integral PID control electronics and control valve, will maintain a desired set pressure. In addition to the pressure control function, the Model 5866RT provides a 0-5 V signal which is linear with mass flow rate. The Model 5866RT can also be configured as a mass flow controller for calibration or test purposes.




Typical Upstream Configuration

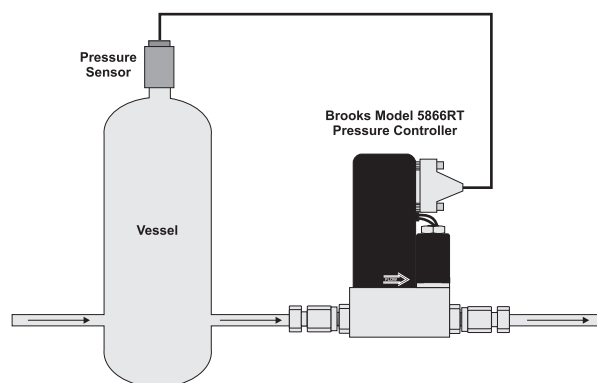

When the controller is placed downstream of the pressure vessel, the flow is usually determined by a mass flow controller in the line upstream of the vessel.

Typical Downstream Configuration

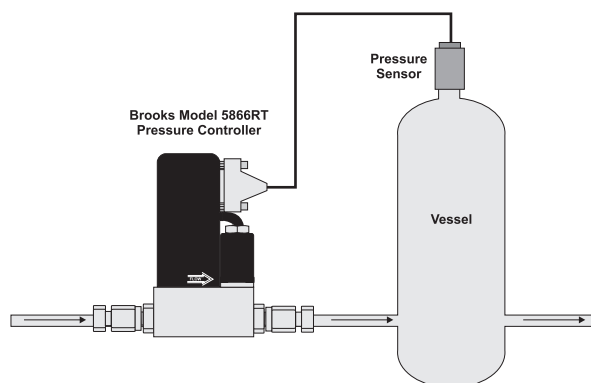

With the pressure controller upstream of the vessel, the inlet of the pressure controller can be at atmospheric gas pressure or at the vapor pressure of a liquid source. The flow in this situation is usually determined by the characteristics of a vacuum pump.

A pressure controller system can be built in two different configurations as shown above.

Product Specifications

Model 5866RT

Performance

Flow Range*	Any range from 0 to 3 sccm to 0 to 30,000 sccm N ₂ Eq.
Flow Output Signals	0-5 Vdc, max. load 1 k ohm
Flow Accuracy	3-10000 sccm N ₂ Eq.
Flow Repeatability	±1.0% full scale including linearity at the calibration conditions. ±1.5% full scale for flow rates greater than 20 slpm
Flow Temperature Coefficient	±0.25% of rate
Pressure Ranges	0.1% full scale/°C
Remote Pressure Sensor Input	Dependent upon remote transducer
Pressure Setpoint Signal	Suitable for any pressure sensor with a 0-5 V or 0-10 V output signal
Pressure Ratings	0-5 Vdc or 0-10 V. 5 Vdc reference output available for setpoint generation. 1 k ohm maximum load
Pressure Equipment Directive (PED) 97/23/EC	Equipment falls under Sound Engineering Practice (SEP)
Pressure Control Range	100:1 for a remote transducer with a 0-10 V output
Pressure Response Time	Less than 0.8 seconds typical for a 0-100% command step with less than 2% pressure overshoot Actual pressure response depends on system design
Temperature Range	32 to 150°F (0-65°C)
Input / Output Offset	0.2% full scale
Leak Integrity, Inbound to Outboard	Elastomer Seal: 1 x 10 ⁻⁹ atm cc/sec Helium max. Metal Seal: 1 x 10 ⁻¹⁰ atm scc/sec Helium ma

Mechanical

Materials of Construction	<p>Wetted Parts - Standard: 316L/316L VAR Stainless Steel</p> <p>Valve Seat - Standard: Viton® fluoroelastomers or metal</p> <p>External/Internal Seals: fluoroelastomers or metal; Optional: Buna-N, Teflon® or Kalrez®</p>
Mechanical Connections	<p>Model 5866RT Standard: 1/8" or 1/4" Stainless Steel Compression Fittings</p> <p>Model 5866RT Optional: 1/4" VCOTM or VCR™</p> <p>Model 5866RT(M) 1/4" VCR</p>


Electrical

Electrical Connection	15 Pin D-Connector (DA-15P)
Power Requirements	N.C. 3.5 watts; +15 Vdc (±5%) @ 35 mA, -15 Vdc (±5%) @180 mA N.O. 10.5 watts; ±15 Vdc (±5%) @ 350 mA
Compliance	EMC Directive 89/336/EEC EN 61326-1


*Standard pressure and temperature in accordance with SEMI (Semiconductor Equipment and Materials Institute) standard: 0°C and 101 kPa (760 torr).

Product Dimensions


Model 5866RT - Elastomer Seals and D-Connector Configuration

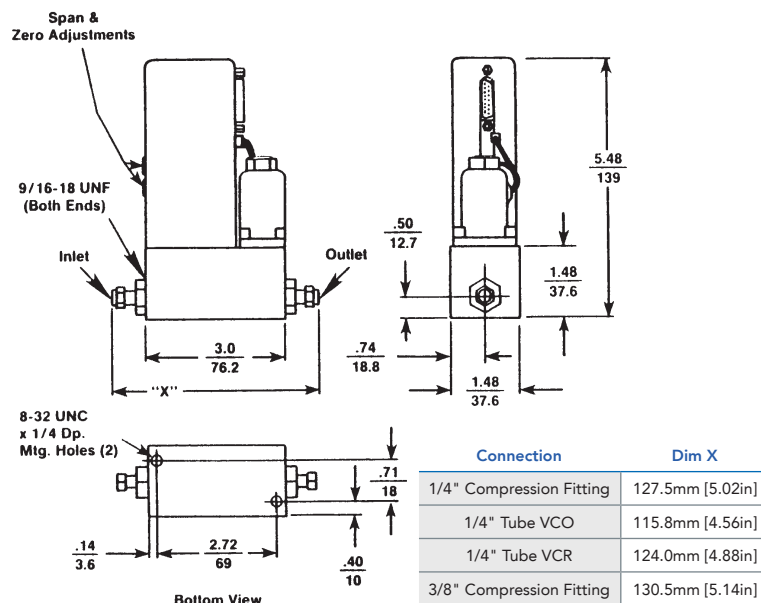

Model 5866RT - VCR® and D-Connector Configuration

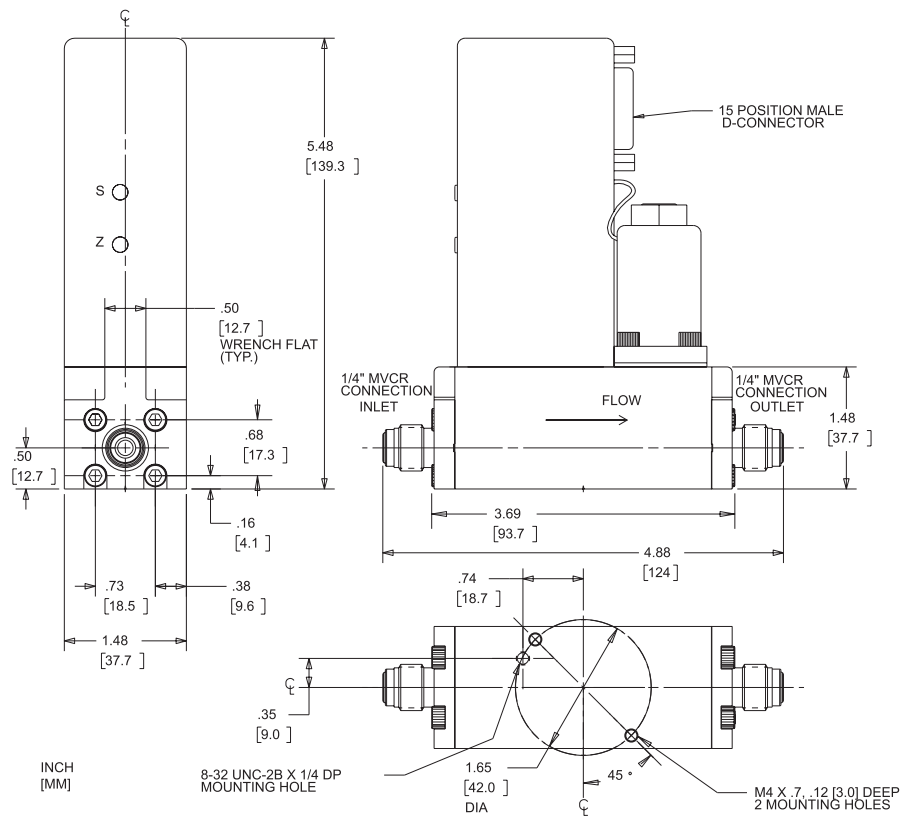

Model 5866RT - Downport and D-Connector Configuration

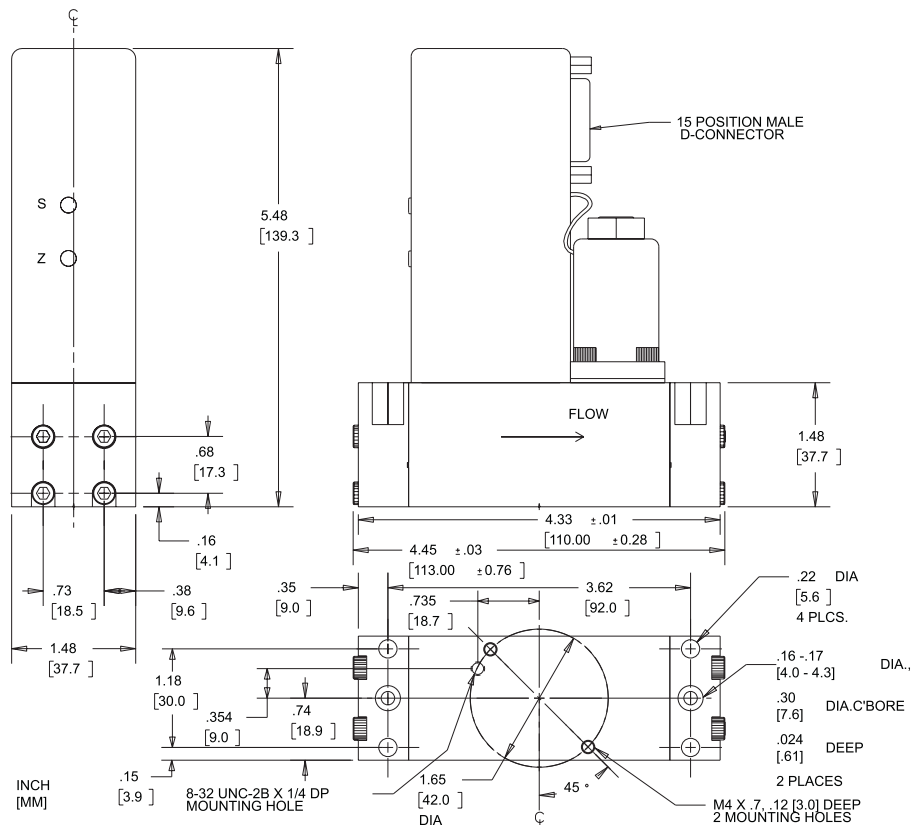

Brooks is committed to assuring all of our customers receive the optimal solution for their application, along with outstanding service and support to back it up. We operate first class repair facilities located around the world to provide rapid response and support. Each location utilizes primary standard calibration equipment to ensure accuracy and reliability for repairs and recalibration and is certified by our local Weights and Measures Authorities and traceable to the relevant International Standards.

Visit www.BrooksInstrument.com to locate the service location nearest to you.

START-UP SERVICE AND IN-SITU CALIBRATION

Brooks Instrument can provide start-up service prior to operation when required. For some process applications, where ISO-9001 Quality Certification is important, it is mandatory to verify and/or (re)calibrate the products periodically. In many cases this service can be provided under in-situ conditions, and the results will be traceable to the relevant international quality standards.

SEMINARS AND TRAINING

Brooks Instrument can provide customer seminars and dedicated training to engineers, end users, and maintenance persons. Please contact your nearest sales representative for more details. Due to Brooks Instrument's commitment to continuous improvement of our products, all specifications are subject to change without notice.v



TRADEMARKS

Brooks Brooks Instrument, LLC

All other trademarks are the property of their respective owners.

Data-Sheet-5866RT-EN/2024-06

Global Headquarters

Brooks Instrument
407 West Vine Street
Hatfield, PA
19440-0903 USA

Toll-Free (USA): 888-554-FLOW
T: 215-362-3500

BrooksAM@BrooksInstrument.com

A list of all Brooks Instrument locations and contact details can be found at www.BrooksInstrument.com

© Copyright 2024 Brooks Instrument, LLC All rights reserved. Printed in U.S.A.

BROOKS®
INSTRUMENT
Beyond Measure