


Installation and Operation Manual

X-TMF-5851i-MFC-eng

Part Number: 541B109AAG

December, 2008

Model 5851*i* Mass Flow Controller

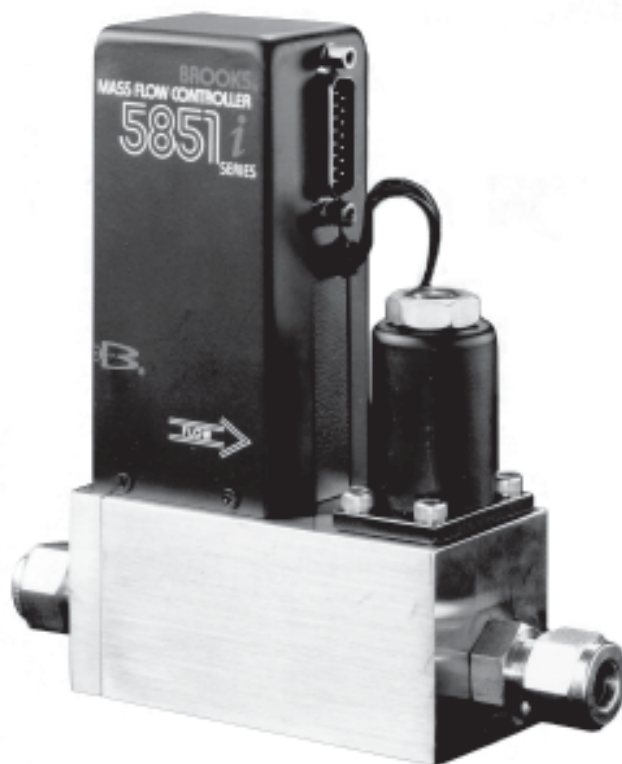

Essential Instructions

Read this page before proceeding!

Brooks Instrument designs, manufactures and tests its products to meet many national and international standards. Because these instruments are sophisticated technical products, you must properly install, use and maintain them to ensure they continue to operate within their normal specifications. The following instructions must be adhered to and integrated into your safety program when installing, using and maintaining Brooks Products.

- Read all instructions prior to installing, operating and servicing the product. If this instruction manual is not the correct manual, please see back cover for local sales office contact information. Save this instruction manual for future reference.
- If you do not understand any of the instructions, contact your Brooks Instrument representative for clarification.
- Follow all warnings, cautions and instructions marked on and supplied with the product.
- Inform and educate your personnel in the proper installation, operation and maintenance of the product.
- Install your equipment as specified in the installation instructions of the appropriate instruction manual and per applicable local and national codes. Connect all products to the proper electrical and pressure sources.
- To ensure proper performance, use qualified personnel to install, operate, update, program and maintain the product.
- When replacement parts are required, ensure that qualified people use replacement parts specified by Brooks Instrument. Unauthorized parts and procedures can affect the product's performance and place the safe operation of your process at risk. Look-alike substitutions may result in fire, electrical hazards or improper operation.
- Ensure that all equipment doors are closed and protective covers are in place, except when maintenance is being performed by qualified persons, to prevent electrical shock and personal injury.

Pressure Equipment Directive (PED)

All pressure equipment with an internal pressure greater than 0.5 bar (g) and a size larger than 25mm or 1" (inch) falls under the Pressure Equipment Directive (PED). The Directive is applicable within the European Economic Area (EU plus Norway, Iceland and Liechtenstein). Pressure equipment can be traded freely within this area once the PED has been complied with.

- Section 1 of this manual contains important safety and operating instructions related to the PED directive.
- Meters described in this manual are in compliance with EN directive 97/23/EC module H *Conformity Assessment*.
- All Brooks Instrument Flowmeters fall under fluid group 1.
- Meters larger than 25mm or 1" (inch) are in compliance with category I, II, III of PED.
- Meters of 25mm or 1" (inch) or smaller are Sound Engineering Practice (SEP).

ESD (Electrostatic Discharge)

CAUTION

This instrument contains electronic components that are susceptible to damage by static electricity. Proper handling procedures must be observed during the removal, installation or other handling of circuit boards or devices.

Handling Procedure:

1. Power to unit must be removed.
2. Personnel must be grounded, via a wrist strap or other safe, suitable means before any printed circuit card or other internal device is installed, removed or adjusted.
3. Printed circuit cards must be transported in a conductive container. Boards must not be removed from protective enclosure until immediately before installation. Removed boards must immediately be placed in protective container for transport, storage or return to factory.

Comments

This instrument is not unique in its content of ESD (electrostatic discharge) sensitive components. Most modern electronic designs contain components that utilize metal oxide technology (NMOS, SMOS, etc.). Experience has proven that even small amounts of static electricity can damage or destroy these devices. Damaged components, even though they appear to function properly, exhibit early failure.

Installation and Operation Manual

X-TMF-5851i-MFC-eng
Part Number: 541B109AAG
December, 2008

Brooks® Model 5851*i*

Dear Customer,

We appreciate this opportunity to service your flow measurement and control requirements with a Brooks Instrument device. Every day, flow customers all over the world turn to Brooks Instrument for solutions to their gas and liquid low-flow applications. Brooks provides an array of flow measurement and control products for various industries from biopharmaceuticals, oil and gas, fuel cell research and chemicals, to medical devices, analytical instrumentation, semiconductor manufacturing, and more.

The Brooks product you have just received is of the highest quality available, offering superior performance, reliability and value to the user. It is designed with the ever changing process conditions, accuracy requirements and hostile process environments in mind to provide you with a lifetime of dependable service.

We recommend that you read this manual in its entirety. Should you require any additional information concerning Brooks products and services, please contact your local Brooks Sales and Service Office listed on the back cover of this manual or visit www.BrooksInstrument.com

Yours sincerely,
Brooks Instrument

*THIS PAGE WAS
INTENTIONALLY
LEFT BLANK*

Section 1 Introduction

Paragraph

Number

Page

1-1	Purpose	1-1
1-2	Description	1-1
1-3	Specifications	1-3

Section 2 Installation

2-1	Receipt of Equipment	2-1
2-2	Recommended Storage Practice	2-1
2-3	Return Shipment	2-2
2-4	Gas Connections	2-2
2-5	Installation	2-3
2-6	In-Line Filter	2-4
2-7	Electrical Interfacing	2-5
2-8	Configuring the PC Board	2-8

Section 3 Operation

3-1	Theory of Operation	3-1
3-2	Operating Procedure	3-2
3-3	Zero Adjustment	3-3
3-4	Calibration Procedure	3-4
3-5	Response	3-6

Section 4 Maintenance

4-1	General	4-1
4-2	Troubleshooting	4-1
4-3	Sensor Tube	4-6
4-4	Disassembly and Assembly	4-6
4-5	Use of the Conversion Tables	4-10
4-6	Use of Orifice Sizing Nomograph	4-11
4-7	Restrictor Sizing	4-15

Section 5 Parts List

5-1	General	5-1
-----	---------------	-----

Section A CE Certification

CE Certification of Mass Flow Equipment	A-1
---	-----

Brooks® Model 5851i

Figures

Figure		Page
1-1	Command Steps, Soft Start Disabled	1-2
1-2	0-100% Command Step, Soft Start Enabled	1-2
2-1	Model 5851i Dimensions	2-3
2-2	"D" Type Connector Pin Arrangement	2-4
2-3	Maximum Allowable Loop Resistance	2-5
2-4	Common Electrical Hook-Ups, Voltage I/O Version	2-6
2-5	Recommended I/O Wiring Configuration for Current Signals (Non-Isolated Power Supply)	2-7
2-6	Recommended I/O Wiring Configuration for Current Signals (Isolated Power Supply)	2-7
3-1	Flow Sensor Operational Diagram	3-2
3-2	Flow Control System Block Diagram	3-3
3-3	PC Board Jumper Location & Function	3-7
3-4	Model 5851i Calibration Connections	3-8
3-5	Adjustment Potentiometer Location	3-8
3-6	Fast Response Adjustment	3-9
4-1	Torque Sequence for the Valve Retainer Plate	4-3
4-2	Valve Adjusting Spacer Locations	4-5
4-3	Voltmeter Connections for Valve Adjustment	4-7
4-4	Example Nomograph	4-16
4-5	Model 5851i Orifice Sizing Nomograph	4-17
4-6	Model 5851i Restrictor Element Assembly	4-18
4-7	Model 5851i Restrictor Element Orientation in Controller Body	4-18
5-1	Model 5851i Parts Drawing	5-2

Tables

Table		Page
2-1	Recommended Filter Size	2-4
4-1	Bench Troubleshooting	4-2
4-2	Sensor Troubleshooting	4-4
4-3	Conversion Factors (Nitrogen Base)	4-12
5-1	Model 5851i Replacement Parts List	5-3
5-2	Tool and Spare Part Kits for 5850 Series	5-4

1-1 Purpose

The Brooks® Model 5851*i* Flow Controller is a mass flow measurement device designed for accurately measuring and rapidly controlling flows of gases. This instruction manual is intended to provide the user with all the information necessary to install, operate and maintain the Brooks 5851*i* Mass Flow Controller. This manual is organized into five sections:

Section 1	Introduction
Section 2	Installation
Section 3	Operation
Section 4	Maintenance
Section 5	Replacement Parts

It is recommended that this manual be read in its entirety before attempting to operate or repair the Model 5851*i*.

1-2 Description

The Brooks Model 5851*i* Mass Flow Controller is used where manual, electronic or computer controlled gas handling occurs. The Model 5851*i* consists of three basic units: a flow sensor, a control valve and an integral electronic control system. This combination produces a stable gas flow, which eliminates the need to continuously monitor and re-adjust gas pressures. Standard features include:

Fast Response Control permits rapid gas settling times with little or no over/undershoot. Refer to Figure 1-1.

Soft Start provides a flow ramping function which slows down the introduction of the process gas for those processes which cannot tolerate rapid flow transition. Refer to Section 2-7 and Figure 1-2.

Valve Override permits the user to fully open and close the control valve independent of the setpoint (command) setting. Refer to Section 2-6.

Setpoint (Command) permits the user to program the mass flow controller with an external 0-5 Vdc or 4-20 mA signal. Refer to Section 2-6.

Low Command Valve Inhibit (Auto Shutoff) prevents the valve from opening whenever the set-point is less than 2% of full scale.

Removable Cleanable Sensor permits the user to clean or replace the sensor. Refer to Sections 4-2 & 4-4.

Output Limiting prevents possible damage to delicate data acquisition devices by limiting the output to -0.7 Vdc and +6.8 Vdc on the voltage signal output and 0 to 26 mA on the current output.

Brooks® Model 5851i


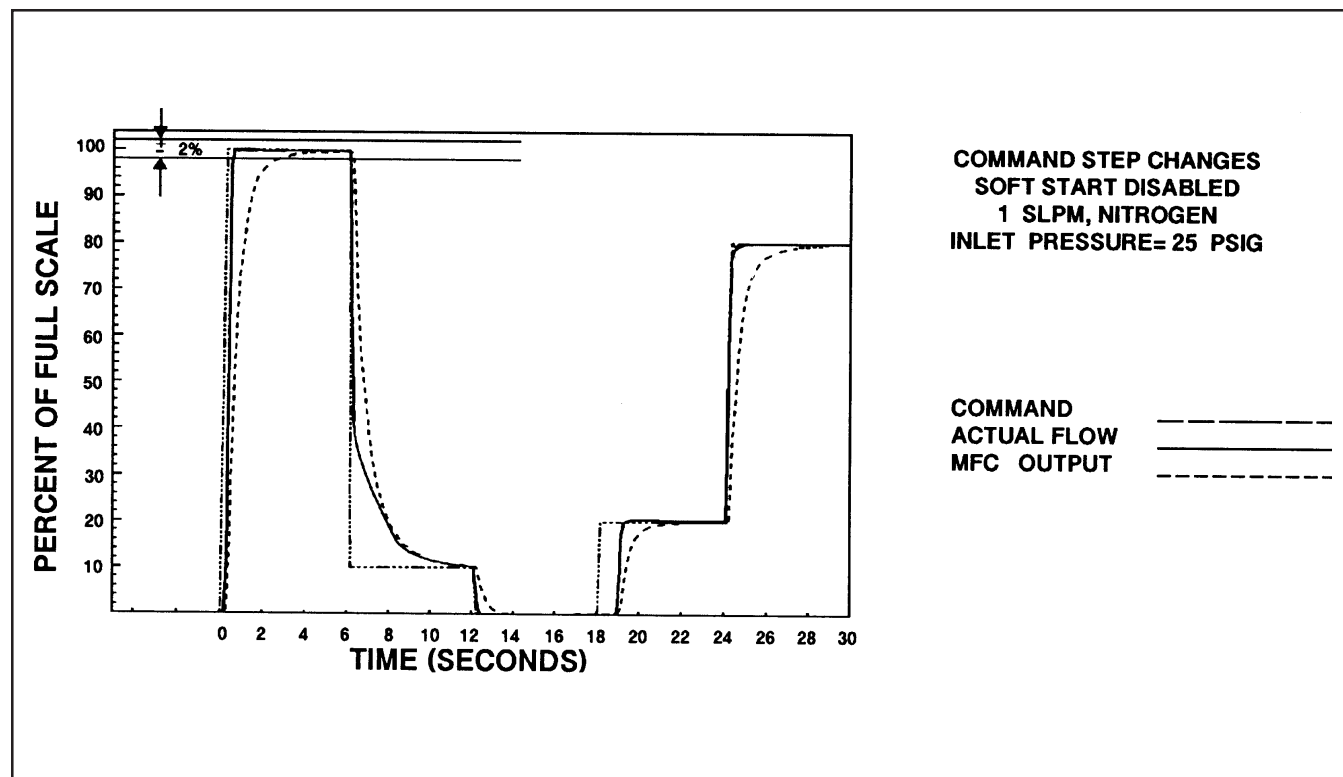


Figure 1-1 Command Steps, Soft Start Disabled

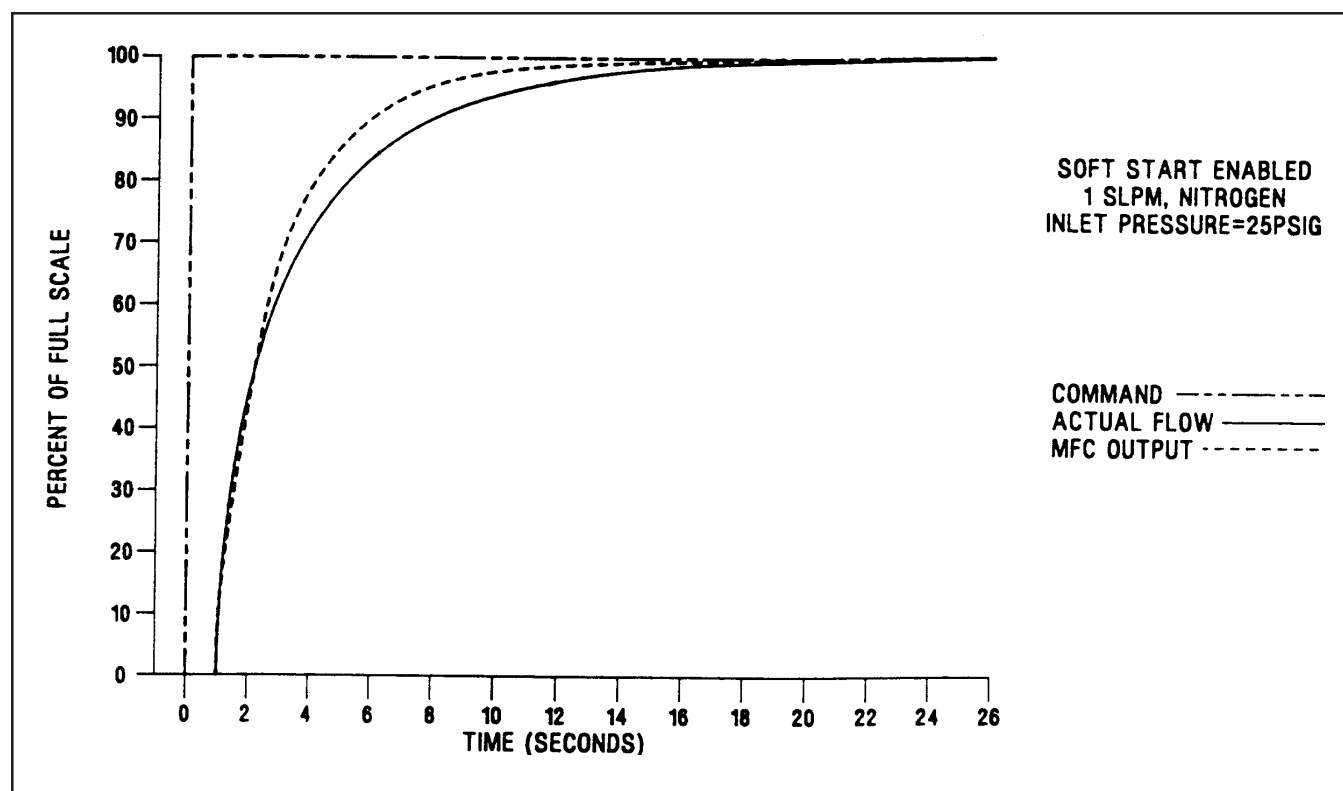

1-2 Figure 1-2 0 - 100% Command Step, Soft Start Enabled

1-3 Specifications

⚠ WARNING

Do not operate this instrument in excess of the specifications listed below. Failure to heed this warning can result in serious personal injury and/or damage to the equipment.

Standard Ranges

Any full scale flow rate from 10 slpm to 100 slpm (nitrogen equivalent); up to 200 slpm hydrogen.

Accuracy

±1% full scale including linearity at calibration conditions

Repeatability

0.25% of rate

Response Time

Less than 6 seconds response to within 2% of full scale final value with a 0 to 100% command step.

Power Requirements

+22.5 to 28 Vdc — 370 mA @ +28 Vdc

Ambient Temperature Limits

Operating: 5 to 65°C (40 to 150°F)

Non-Operating: -25 to 100°C (-13 to +212°F)

Working Pressure

1500 psi (10.342 MPa) maximum

Differential Pressure

10 to 50 psi. Higher differential pressures are allowable depending on gas and range. Consult factory for details.

Output Signal

0-5 Vdc into 2,000 ohms or greater. Maximum ripple 3 mV. Jumper selectable 4-20 mAdc or 0-20 mAdc. Refer to Fig. 2-3 for maximum total loop resistance.

5 Volt Reference Output

5 Volts ±0.2%. Maximum load 1k ohms.

Temperature Sensitivity

Zero: less than ±0.075% full scale per degree C.

Span: less than ±1.0% full scale shift over 10-50°C range

Mounting Attitude Sensitivity

±0.5% maximum full scale deviation after re-zeroing

Command Input

Jumper Selectable: 0-5 Vdc, Input resistance 200k ohm or 4-20 mAdc, Input resistance 75 ohm

Brooks® Model 5851i

Leak Integrity

1 x 10⁻⁹ Atm. scc/sec Helium

Control Range

50 to 1

Mechanical Connection

Interchangeable with most popular mass flow controllers.

Refer to Figure 2-1.

Electrical Connection

D-Type, 15-pin connector (DA-15P). Mating connector supplied.

*Standard temperature and pressure in accordance with SEMI (Semiconductor Equipment and Materials International) standard: 0°C and 101.3 kPa (760 Torr). The mass flow controller can be calibrated to other reference standard conditions. Specify at time of ordering.

2-1 Receipt of Equipment

When the equipment is received, the outside packing case should be checked for damage incurred during shipment. If the packing case is damaged, the local carrier should be notified at once regarding his liability. A report should be submitted to the Product Service Department, Brooks Instrument, Hatfield, Pennsylvania 19440-0903.

Remove the envelope containing the packing list. Carefully remove the equipment from the packing case. Make sure spare parts are not discarded with the packing materials. Inspect for damaged or missing parts.

Brooks Instrument

407 W. Vine Street
P.O. Box 903
Hatfield, PA 19440 USA
Toll Free (888) 554-FLOW (3569)
Tel (215) 362-3700
Fax (215) 362-3745
E-mail: BrooksAm@BrooksInstrument.com
www.BrooksInstrument.com

Brooks Instrument

Neonstraat 3
6718 WX Ede, Netherlands
P.O. Box 428
6710 BK Ede, Netherlands
Tel 31-318-549-300
Fax 31-318-549-309
E-mail: BrooksEu@BrooksInstrument.com

Brooks Instrument

1-4-4 Kitasuna Koto-Ku
Tokyo, 136-0073 Japan
Tel 011-81-3-5633-7100
Fax 011-81-3-5633-7101
Email: BrooksAs@BrooksInstrument.com

2-2 Recommended Storage Practice

If intermediate or long-term storage is required for equipment as supplied by Brooks Instrument, it is recommended that said equipment be stored in accordance with the following:

- a. Within the original shipping container.
- b. Store in a sheltered area with the following conditions:
 1. Ambient temperature 21°C (70°F) nominal.
 2. Relative humidity 45% nominal, 60% maximum/25% minimum.
Upon removal from storage, a visual inspection should be conducted to verify its condition is "as received." If the equipment has been in storage for an excess of ten (10) months or in conditions in excess of those recommended, all pressure boundary seals should be replaced and the device subjected to a pneumatic pressure test in accordance with applicable vessel codes.

Brooks® Model 5851i

2-3 Return Shipment

Prior to returning any Brooks equipment to the factory, contact the factory - for a Return Materials Authorization Number (RMA#). This can be obtained at Brooks Instrument, Product Service Department, 407 West Vine Street, Hatfield, PA 19440-0903, or call toll free 1-888-554-FLOW (3569).

Brooks Instrument

407 W. Vine Street
P.O. Box 903
Hatfield, PA 19440 USA
Toll Free (888) 554-FLOW (3569)
Tel (215) 362-3700
Fax (215) 362-3745
E-mail: BrooksAm@BrooksInstrument.com
www.BrooksInstrument.com

Brooks Instrument

Neonstraat 3
6718 WX Ede, Netherlands
P.O. Box 428
6710 BK Ede, Netherlands
Tel 31-318-549-300
Fax 31-318-549-309
E-mail: BrooksEu@BrooksInstrument.com

Brooks Instrument

1-4-4 Kitasuna Koto-Ku
Tokyo, 136-0073 Japan
Tel 011-81-3-5633-7100
Fax 011-81-3-5633-7101
Email: BrooksAs@BrooksInstrument.com

Also, completion of Form RPR003-1, Brooks Instrument Decontamination Statement, as well as, a Material Safety Data Sheet (MSDS) for the fluid(s) used in the meter, is required before any Brooks Personnel can begin processing the equipment. Copies of the form can be obtained at one of the locations above.

2-4 Gas Connections

Standard inlet and outlet connections supplied on the Model 5851i are 3/8" compression fittings.

Optional VCO™ and VCR™ connections are available upon request. Prior to installation, make certain all piping is clean and free of obstructions. Install the piping in such a manner that permits easy removal if the instrument is to be removed for cleaning or test bench troubleshooting.

2-5 Installation (Refer to Figures 2-1 through 2-4)**⚠ CAUTION**

When installing the controller, care should be taken that no foreign materials enter the inlet or outlet of the instrument. Do not remove the protective end caps until time of installation.

Recommended installation procedures:

- The Model 5851i should be located in a clean dry atmosphere relatively free from shock and vibration.
- Leave sufficient room for access to the electrical components.
- Install in such a manner that permits easy removal if the instrument requires cleaning.

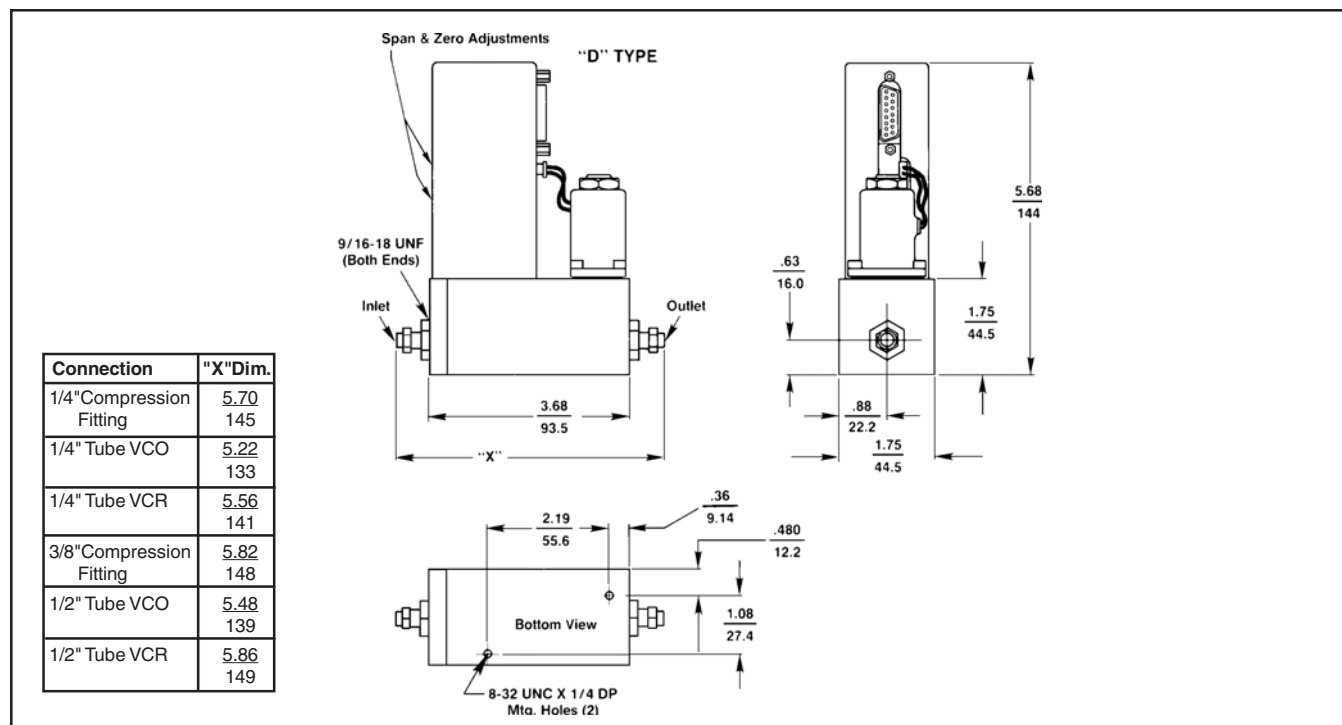


Figure 2-1 Model 5851i Dimensions

CAUTION

Do not soak the sensor assembly in a cleaning solution. If solvent seeps into the sensor assembly, it will probably damage the sensor, or, at least, significantly alter its operating characteristics.

- d. The Model 5851i Mass Flow Controller can be installed in any position. However, mounting orientations other than the original factory calibration (see data sheet) will result in a $\pm 0.5\%$ maximum full scale shift after re-zeroing.
- e. When installing controllers, be aware that sharp abrupt angles in the system piping directly upstream of the controller may cause a small shift in accuracy. If possible, have at least ten pipe diameters of straight tubing upstream of the 5851i mass flow controller.

NOTE: The control valve in the Model 5851i provides precision control and is not designed for positive shut-off. If positive shut-off is required, it is recommended that a separate shut-off valve be installed in-line.

CAUTION

Since the Model 5851i control valve is not a positive shut-off, a separate solenoid valve may have been installed for that purpose. It should be noted that a small amount of gas may be trapped between the downstream side of the mass flow controller and the solenoid resulting in a surge upon actuation of the controller. This surge can be reduced in magnitude by locating the controller and solenoid valve close together or by moving the solenoid valve upstream of the controller.


Brooks® Model 5851i

PIN NO.	FUNCTION	COLOR CODE
1	Cmd. Common (Command Pot "CCW")	Black
2	0-5 Volt Signal Output	White
3	Supply Common	Red
4	Valve Off	Green
5	+15 Vdc Supply	Orange
6	-15 Vdc Supply	Blue
7	Valve Test Point	Wht/Blk
8	Cmd. Input or Cmd. Pot "S"	Red/Blk
9	Supply Voltage Common	Grn/Blk
10	0-5 Volt Signal Common	Org/Blk
11	+5 Volt Reference Output (Cmd. Pot "CW")	Blu/Blk
12	Valve Override	Blk/Wht
13	Not Used	Red/Wht
14	Chassis Ground	Grn/Wht
15	Remote Transducer Input***	Blu/Wht

** Jumper Selectable

*** Factory Activated Option

PIN OUT - TOP VIEW



NOTE:

1. Cable shield tied to chassis ground in meter connector. Make no connection on customer end.
2. All power leads must be connected to power supply.

Figure 2-2 "D" Type Connector Pin Arrangement

2-6 In-Line Filter

It is recommended that an in-line filter be installed upstream from the controller to prevent the possibility of any foreign material entering the flow sensor or control valve. The filtering element should be replaced periodically or ultrasonically cleaned.

Table 2-1 Recommended Filter Size

Maximum Flow Rate	Recommended Filter Size
10 to 30 slpm	15 micron
Above 30 slpm	30 micron

NOTE: The above lists the maximum recommended porosity for each flow range. It is recommended that the minimum micron porosity that does not limit the full scale flowrate be used.

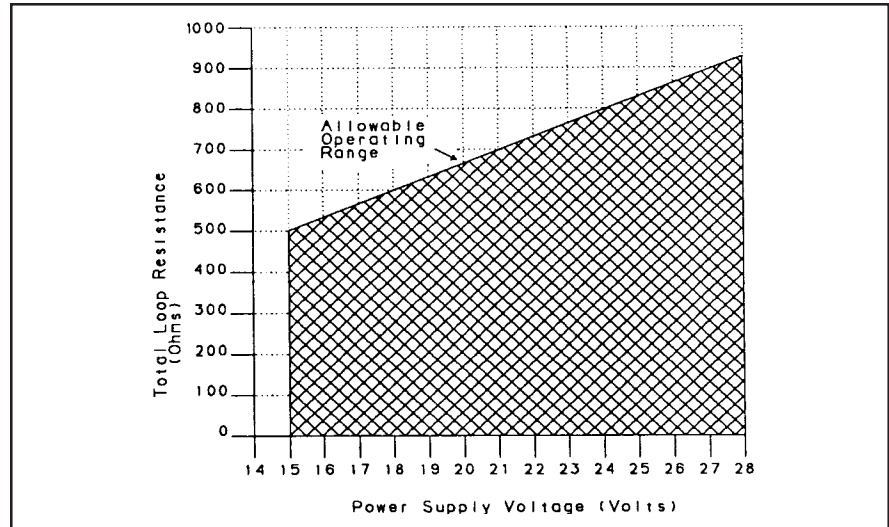


Figure 2-3 Maximum Allowable Loop Resistance

2-7 Electrical Interfacing

To insure proper operation, the 5851i must be connected per Figures 2-2, 2-3 and 2-4 and configured according to Section 2-7. As a minimum, the following connections must be made for new installations:

Function

- Chassis Ground
- Signal Output Return
- Voltage or Current Signal Output
- 22.5-28 Vdc Supply
- Supply Common
- Voltage or Current Setpoint Input
- Setpoint Return

Electrical Hook-up

Setpoint (Command) Input

The 5851i Mass Flow Controller can be used with a current (4-20 mA_{dc}) or voltage (0-5 V_{dc}) setpoint. To use the current setpoint, connect the setpoint (+) signal to pin 7 and the setpoint return (-) signal to pin 1 of the D-connector and configure the PC Board per Section 2-7. To use the voltage setpoint, connect the setpoint signal to pin 8 and the voltage setpoint return to pin 1 of the D-connector and configure the PC Board per Section 2-7.

(The Brook's MFC acts as a current sink to a setpoint input signal. The 0/4-20 mA setpoint signal should be "driven" into the MFC input by a controlled current source. Reference Brook's device specifications for the setpoint input impedance.)

Brooks® Model 5851i

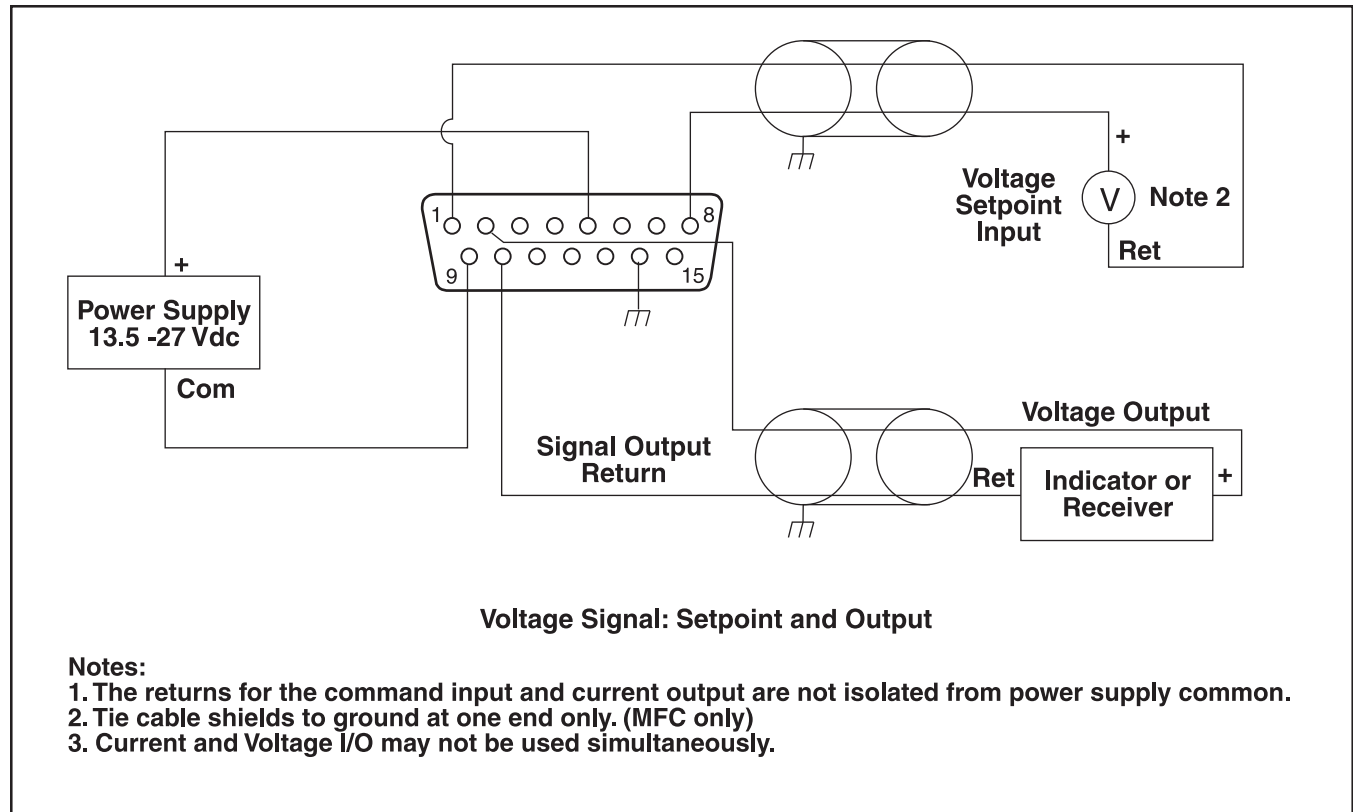


Figure 2-4 Common Electrical Hook-Ups, Voltage I/O Version


Signal Output

The flow signal output can be measured as a voltage and a current simultaneously on two different pins of the D-connector. Pin 2 indicates the flowrate with a 0-5 Vdc signal proportional to the mass flow rate. Pin 4 indicates the flowrate with either a 0-20 mA_{dc} or 4-20 mA_{dc} current signal as determined by jumpers on the PC Board (refer to Section 2-7 for jumper positions). Both the current and voltage signals are returned on pin 10 of the D-connector.

(The Brook's MFC acts as the current source when providing a 0/4-20 mA output signal to the load. The output signal is "driven" by the MFC into the customer load. Reference Brook's device specifications for maximum load capacity.)

Supply

The power for the mass flow controller is connected to pin 5 (+22.5 to +28 Vdc) and pin 9 (supply common) of the D-connector. Refer to Section 1-3 for the power requirements.

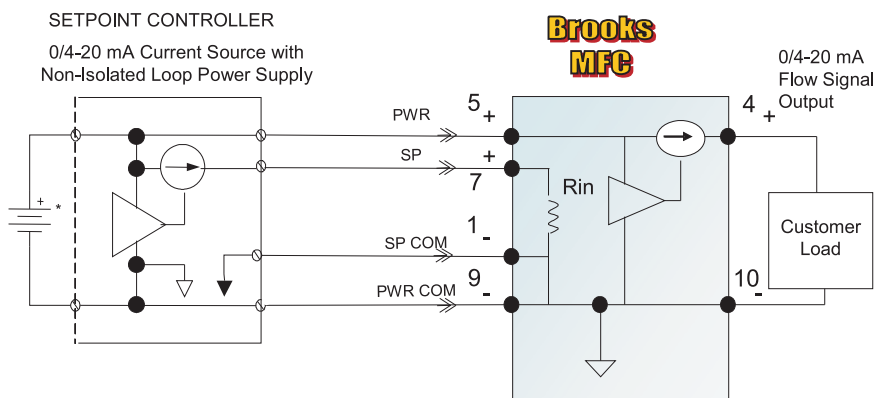


Note: Setpoint common, flow signal output common, and power supply common are connected internally in the MFC. Reference Brook's device specifications for power supply voltage and setpoint input impedance.

Input: The 4/20 mA setpoint signal is "driven" into the MFC input using a controlled source.

Output: The 4/20 mA output signal is "sourced" by the MFC into the customer load.

Figure 2-5 Recommended I/O Wiring Configuration for Current Signals (Non-Isolated Power Supply)

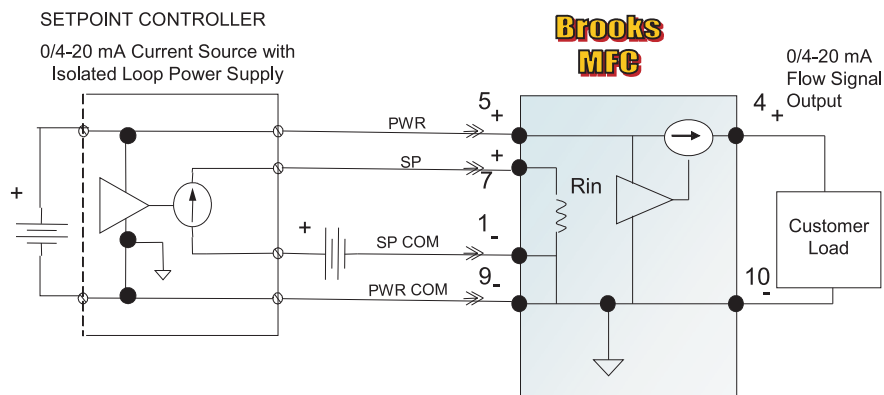

Note: Setpoint common, flow signal output common, and power supply common are connected internally in the MFC. Reference Brook's device specifications for power supply voltage and setpoint input impedance.

Input: The 4/20 mA setpoint signal is "driven" into the MFC input using a controlled source.

Output: The 4/20 mA output signal is "sourced" by the MFC into the customer load.

Figure 2-6 Recommended I/O Wiring Configuration for Current Signals (Isolated Power Supply)

Brooks® Model 5851i

Chassis Ground

Connect earth ground to pin 14 of the D-connector.

Valve Override (connection optional)

The valve override function allows full opening and closing of the valve independent of the setpoint:

To open the valve, apply +22.5 to +28 Vdc to pin 12

To close the valve, connect pin 12 to ground.

Isolating pin 12 (no connection) returns the controller to normal operation.

NOTE: For normal operation, pin 12 must be left open (floating)

2-8 Configuring the PC Board

NOTE: To obtain access to the jumpers, the electronics cover can must be removed. Disconnect the power to the mass flow controller and any cables to the D-connector and the valve coil connector. Remove the three screws at the base of the can and remove the top jack post of the D-connector. Remove the can. The can must be replaced before returning the unit to service. Refer to Section 2-6 for the proper electrical hook-up. Refer to Figure 3-3 for PC Board jumper locations and functions.

Setpoint (Command) Input

The mass flow controller can be configured for voltage or current setpoint (command) input. Jumper J7 (green) must be in the right-hand position for 0-5 Vdc setpoint and in the left-hand position for a 4-20 mAdc setpoint input.

Signal Output

A 0-5 Vdc flow signal output is always available. The current signal output is jumper selectable for either 0-20 mAdc or 4-20 mAdc. Jumpers J3 and J4 (blue) must be in the upper position for 0-20 mAdc output and in the lower position for 4-20 mAdc output.

NOTE: Both J3 and J4 must be in the same position. Jumpers J3 and J4 do not affect the voltage output.

Soft Start

To enable soft start, place Jumper J2 (red) in the right-hand position (SS). To disable soft start, place jumper J2 in the left-hand position (N).

3-1 Theory of Operation

The thermal mass flow sensing technique used in the 5851*i* works as follows:

A precision power supply provides a constant power heat input (P) at the heater which is located at the midpoint of the sensor tube. (Refer to Figure 3-1) At zero or no flow conditions, the heat reaching each temperature sensor (one upstream and one downstream of the heater) is equal. Therefore, the temperatures T1 and T2 are equal. When gas flows through the tube, the upstream sensor is cooled and the downstream sensor is heated, producing a temperature difference. The temperature difference T2-T1 is directly proportional to the gas mass flow.

The equation is: $\Delta T = A * P * C_p * m$

Where,

ΔT	=	temperature difference T2 - T1 (K)
C_p	=	specific heat of the gas at constant pressure (kJ/kg-K)
P	=	heater power (kJ/s)
m	=	mass flow (kg/s)
A	=	constant of proportionality (S ² - K ² /kJ ²)

A bridge circuit interprets the temperature difference and a differential amplifier generates a linear 0-5 Vdc signal directly proportional to the gas mass flow rate. The flow restrictor shown in Figure 3-1 performs a ranging function similar to a shunt resistor in an electrical ammeter. The restrictor provides a pressure drop that is linear with flow rate. The sensor tube has the same linear pressure drop/flow relationship. The ratio of the restrictor flow to the sensor tube flow remains constant over the range of the meter. Different restrictors have different pressure drops and produce controllers with different full scale flow rates. The span adjustment in the electronics affects the fine adjustment of the controller's full scale flow.

In addition to the mass flow sensor, the Model 5851*i* Mass Flow Controller has an integral control valve and control circuit, as shown in Figure 3-2. The control circuit senses any difference between setpoint and the flow sensor signal and adjusts the current in the modulating solenoid valve to increase or decrease the flow.

The Model 5851*i* has the following features incorporated in the integral control circuit:

Fast Response adjusted by the anticipate potentiometer. This circuit, when properly adjusted, allows the high frequency information contained in the sensor signal to be amplified to provide a faster responding flow signal for remote indication and use by the control valve.

Brooks® Model 5851i

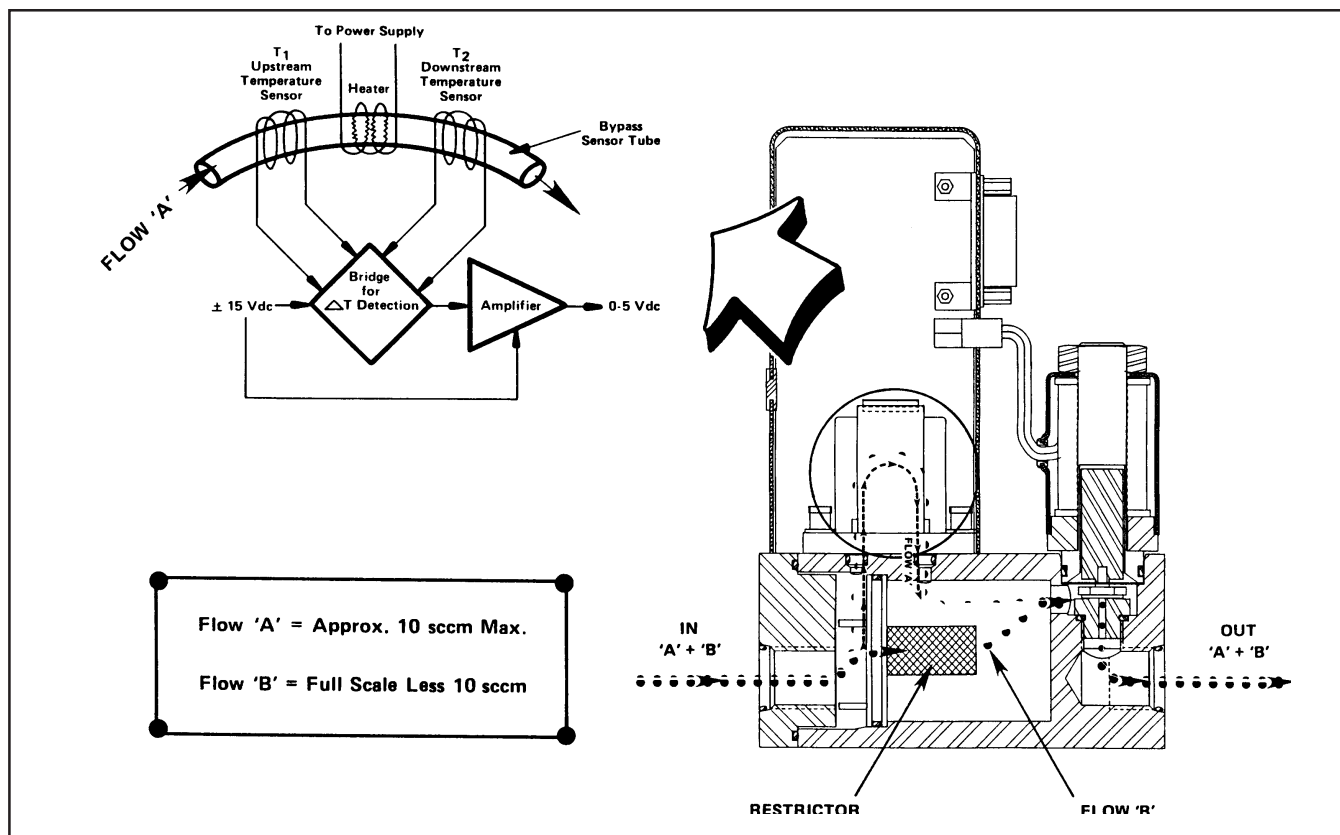


Figure 3-1 Flow Sensor Operational Diagram

Soft Start enabled by moving a jumper on the PC Board. This circuit provides a slow injection of the gas as a protection to the process, particularly those using a volatile or reactive gas. Full gas flow is achieved in approximately 20 seconds. Refer to Section 2-7.

Precision 5 Volt Reference allows the direct connection of a setpoint potentiometer to produce a 0-5 Volt command signal to the controller. A precision ten-turn 2k ohm potentiometer with an integral turns counter is recommended. This will permit repeatable adjustments of setpoint to 1 part in 1,000.

Valve Override allows full opening and closing of the control valve independent of the command setting. (Refer to Section 2-6)

3-2 Operating Procedure

- Apply power to the controller and allow approximately 45 minutes for the instrument to warm up and stabilize its temperature.
- Turn on the gas supply.
- Command 0% flow and observe the controller's output signal. If the output is not zero mVdc ± 10 mVdc or 4 mA dc ± 0.05 mA dc, check for leaks and if none are found, refer to the re-zeroing procedure in Sect. 3-3.
- Set the command for the desired flow rate to assume normal operation.

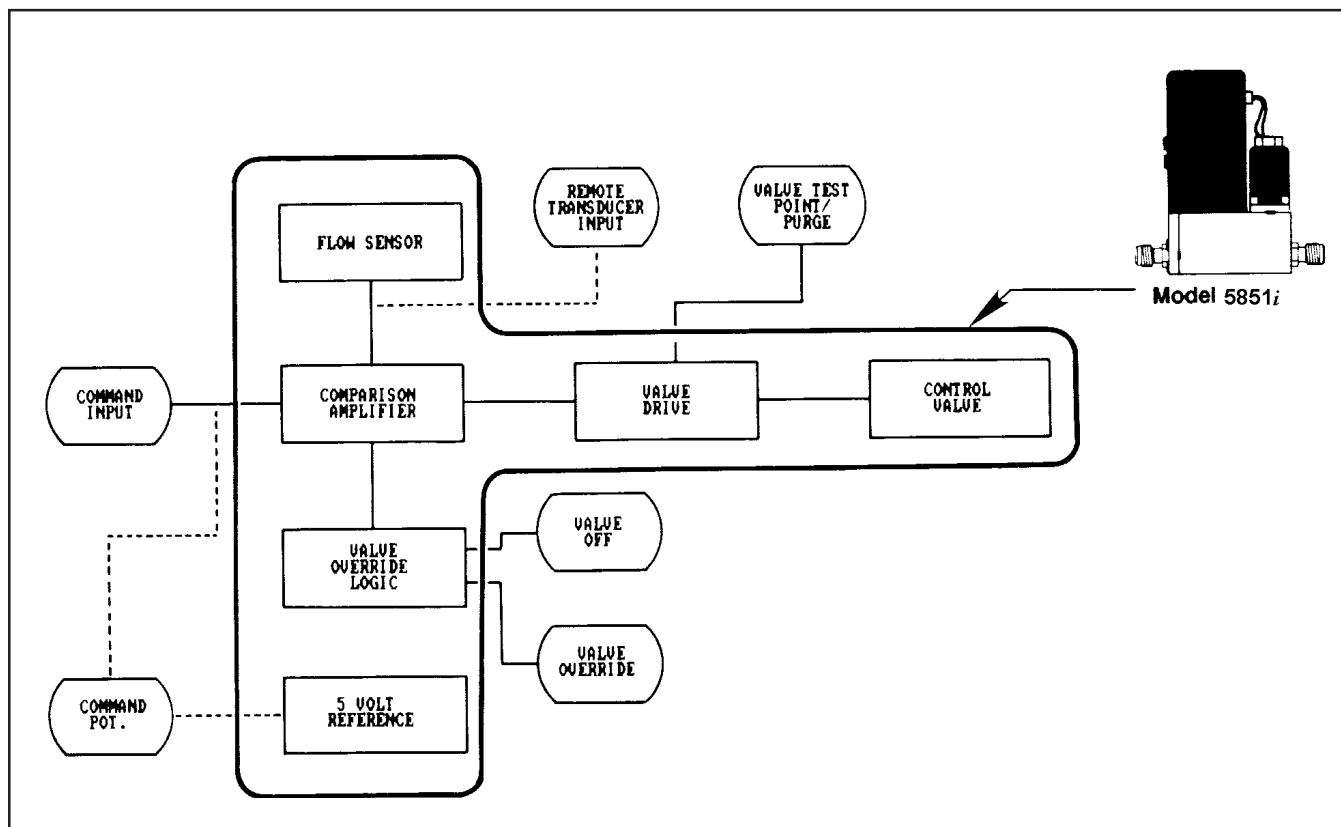


Figure 3-2 Flow Control System Block Diagram

3-3 Zero Adjustment

Each 5851i is factory adjusted to provide a zero ± 10 mVdc signal or a 4 mAdc ± 0.05 mAdc at zero flow. The adjustment is made in our calibration laboratory which is temperature controlled to 21.1°C (70°F $\pm 2^\circ$ F). After initial installation and warm-up in the gas system, the zero flow indication may be other than the factory setting. This is primarily caused by changes in temperature between our calibration laboratory and the final installation. The zero flow reading can also be affected, to a small degree, by changes in line pressure and mounting attitude.

To check zero, always mount the controller in its final configuration and allow a minimum of twenty minutes for the temperature of the controller and its environment to stabilize. Using a suitable voltmeter or current meter, check the controller output signal. If it differs from the factory setting, adjust it by removing the lower pot hole plug which is located closest to the controller body. Adjust the zero potentiometer (refer to Figure 3-5) until the desired output signal is obtained.

NOTE: If the 0-20 mA output is used, adjust zero by monitoring the voltage output signal. This is required because the current output cannot go negative.

Brooks® Model 5851*i***3-4 Calibration Procedure**

NOTE 1: If the valve has been disassembled and any of the following parts have been replaced, the control valve adjusting procedure in Section 4-4c must be performed before the Model 5851*i* is calibrated.

orifice
valve stem
plunger
lower guide spring
valve seat

NOTE 2: Calibration of the 5851*i* mass flow controller requires the use of a digital voltmeter (DVM) and a precision flow standard calibrator such as the Brooks Vol-U-Meter. It is recommended that the calibration be performed only by trained and qualified service personnel.

NOTE 3: If the mass flow controller is to be used on a gas other than the calibration gas, apply the appropriate sensor conversion factor (refer to Section 4-5). Size the orifice for actual operating conditions (refer to Section 4-6).

- a. With the controller installed in an unpressurized gas line, apply power and allow approximately 45 minutes for warm-up. During the warm-up, adjustment and calibration check procedures, do not allow the control valve to open when gas flow is not present. This situation is not a normal operating mode; it will cause the control valve to abnormally heat up. A meter with an abnormally warm valve will be difficult to calibrate. This situation can be prevented by the valve override "closed" when there is no gas flow, or setting the setpoint to less than 1%. Also avoid unnecessary periods with the valve override "open."
- b. Adjust the anticipate potentiometer fully clockwise (twenty turns). Then adjust the anticipate potentiometer ten turns counterclockwise to center the potentiometer. This will provide a rough adjustment of this circuit and make the flow more stable for calibration.
- c. Connect the DVM positive lead to the 0-5V signal output (pin 2) and the negative lead to signal common (TP4). Adjust the zero potentiometer for an output of 0mV \pm 2 mV.
- d. Apply pressure to the system and insure that the zero signal repeats within 2 mV of the voltage set in step "c" above. If the zero does not repeat, check for leakage.

NOTE: Controllers supplied with all-metal valve seats do not provide tight shut-off. A 0-8% leak-through is typical. For metal seat controllers, close a downstream shut-off valve and observe the zero signal.

- e. Adjust the setpoint for 100% flow (5.000V or 20 mAdc). Connect the DVM positive lead to TP2 (linearity voltage) and the negative lead to TP4 (signal common). Adjust the linearity potentiometer for an output of 0.0V (zero volts).

- f. Connect the DVM positive lead to TP1 (100x sensor voltage) and the negative lead to TP4 (circuit common). The setpoint should still be set at 100% flow (5.000V). Measure the flow rate using suitable volumetric calibration equipment. To adjust the controller to the proper full scale flow, calculate a new TP1 voltage using the following equation:

$$\begin{array}{l} \text{New} \\ \text{TP1} \\ \text{Voltage} \end{array} = \frac{\text{measured TP1 voltage}}{\text{measured flow rate}} \times \text{desired flow rate}$$

Adjust the span potentiometer until the voltage at TP1 is equal to the value calculated above. Recheck the flow rate after the flow is stable (at least two minutes). Repeat this check and adjustment procedure until the measured flow rate is within 1% of the desired flow rate.

NOTE: The voltage at TP1 is 100 times the output voltage of the sensor. This voltage can range from 1.2 to 12 volts, however, it is recommended that this voltage stays between 2.0 and 9.0 volts for proper operation. If the recommended voltage range exceeds that desired, accuracy and/or signal stability may not be achieved. If one of the limits is reached, check the orifice and restrictor sizing procedures. Refer to Sections 4-6 and 4-7 respectively.

- g. Adjust the command potentiometer for 0% flow. Connect the DVM positive lead to 0-5V signal output (Pin 2) and the negative lead to TP4. Readjust the zero potentiometer for an output of 0 mV \pm 2 mV as necessary.
- h. Set the command potentiometer for 50% flow (2.500V) and measure the flow rate. Calculate the error as a percentage of full scale.

$$\text{Full Scale Error} = 100\% \times \frac{\text{Measured Flow Rate} - \text{Desired Flow Rate}}{\text{Full Scale Flow Rate}}$$

Example:

What is the percent of full scale error when full scale is equal to 100 sccm?

Measured flow rate = 48.5 sccm

Desired flow rate = 50.0 sccm

$$\text{Full Scale Error} = 100 \times \frac{(48.5 - 50)}{100} = -1.5\%$$

- i. Calculate the TP2 correction voltage: (error recorded in step "h") x 0.450 volts.

Error = -1.5%

TP2 correction voltage = -1.5 x 0.450 = -0.675 volts

New TP2 voltage = 0 volts + (-0.675) = -0.675 volts

Brooks® Model 5851i

- j. Set the command potentiometer for 100% flow (5.000V). Connect the DVM positive lead to TP2 and the negative lead to TP4.
 - k. Adjust the linearity potentiometer for an output equal to the new calculated TP2 voltage.
 - l. Repeat steps f, g and h.
1. If the error recorded in step "h" is less than 0.5%, then the calibration procedure is complete.
 2. If the error is greater than 0.5% set the command potentiometer for 100% (5.000V). Connect the DVM positive lead to TP2 (linearity voltage) and the negative lead to TP4 (circuit common). Calculate a new TP2 voltage as follows:

$$\text{New TP2 voltage} = \frac{\text{error recorded in Step i}}{\text{Step i}} \times 0.450\text{V} + \text{measured TP2 voltage}$$

Example:

Controller error = 0.7%

Measured TP2 voltage = -0.567 volts

TP2 correction = $0.7 \times 0.450 = 0.315$ volts

New TP2 correction = $0.315 + (-0.567) = -0.252$ volts

Adjust the linearity potentiometer for an output equal to the new TP2 voltage and then repeat steps f, g and h.

NOTE: The voltage at TP2 can range from -10 to +3 volts, however, it is recommended that this voltage stays between -2.5 and +2.5 volts for proper operation. If the recommended voltage range is exceeded, the desired accuracy and/or signal stability may not be achieved. If one of the limits is reached, check the restrictor sizing. Refer to Section 4-7.

3-5 Response

Fast Response Adjustment

Two methods of adjusting the step response of the 5851i mass flow controllers can be used.

Method Number 1 describes a procedure that will get the step response close to optimum quickly and without any flow measuring equipment. This method should be used when the response time of the flow controller is not critical to overall system performance.

Method Number 2 describes a procedure that will allow adjustment of your 5851i mass flow controller to optimum step response performance. This method is the preferred way to adjust the step response. Adjustment of the fast response circuit will not affect the accuracy of the flow controller as adjusted in Section 3-4.

1. Fast response adjustment (six seconds response specification not guaranteed)

NOTE: This procedure requires an oscilloscope, chart recorder or a DVM with a sample speed of three samples per second or greater to monitor the rate of change of the output signal.

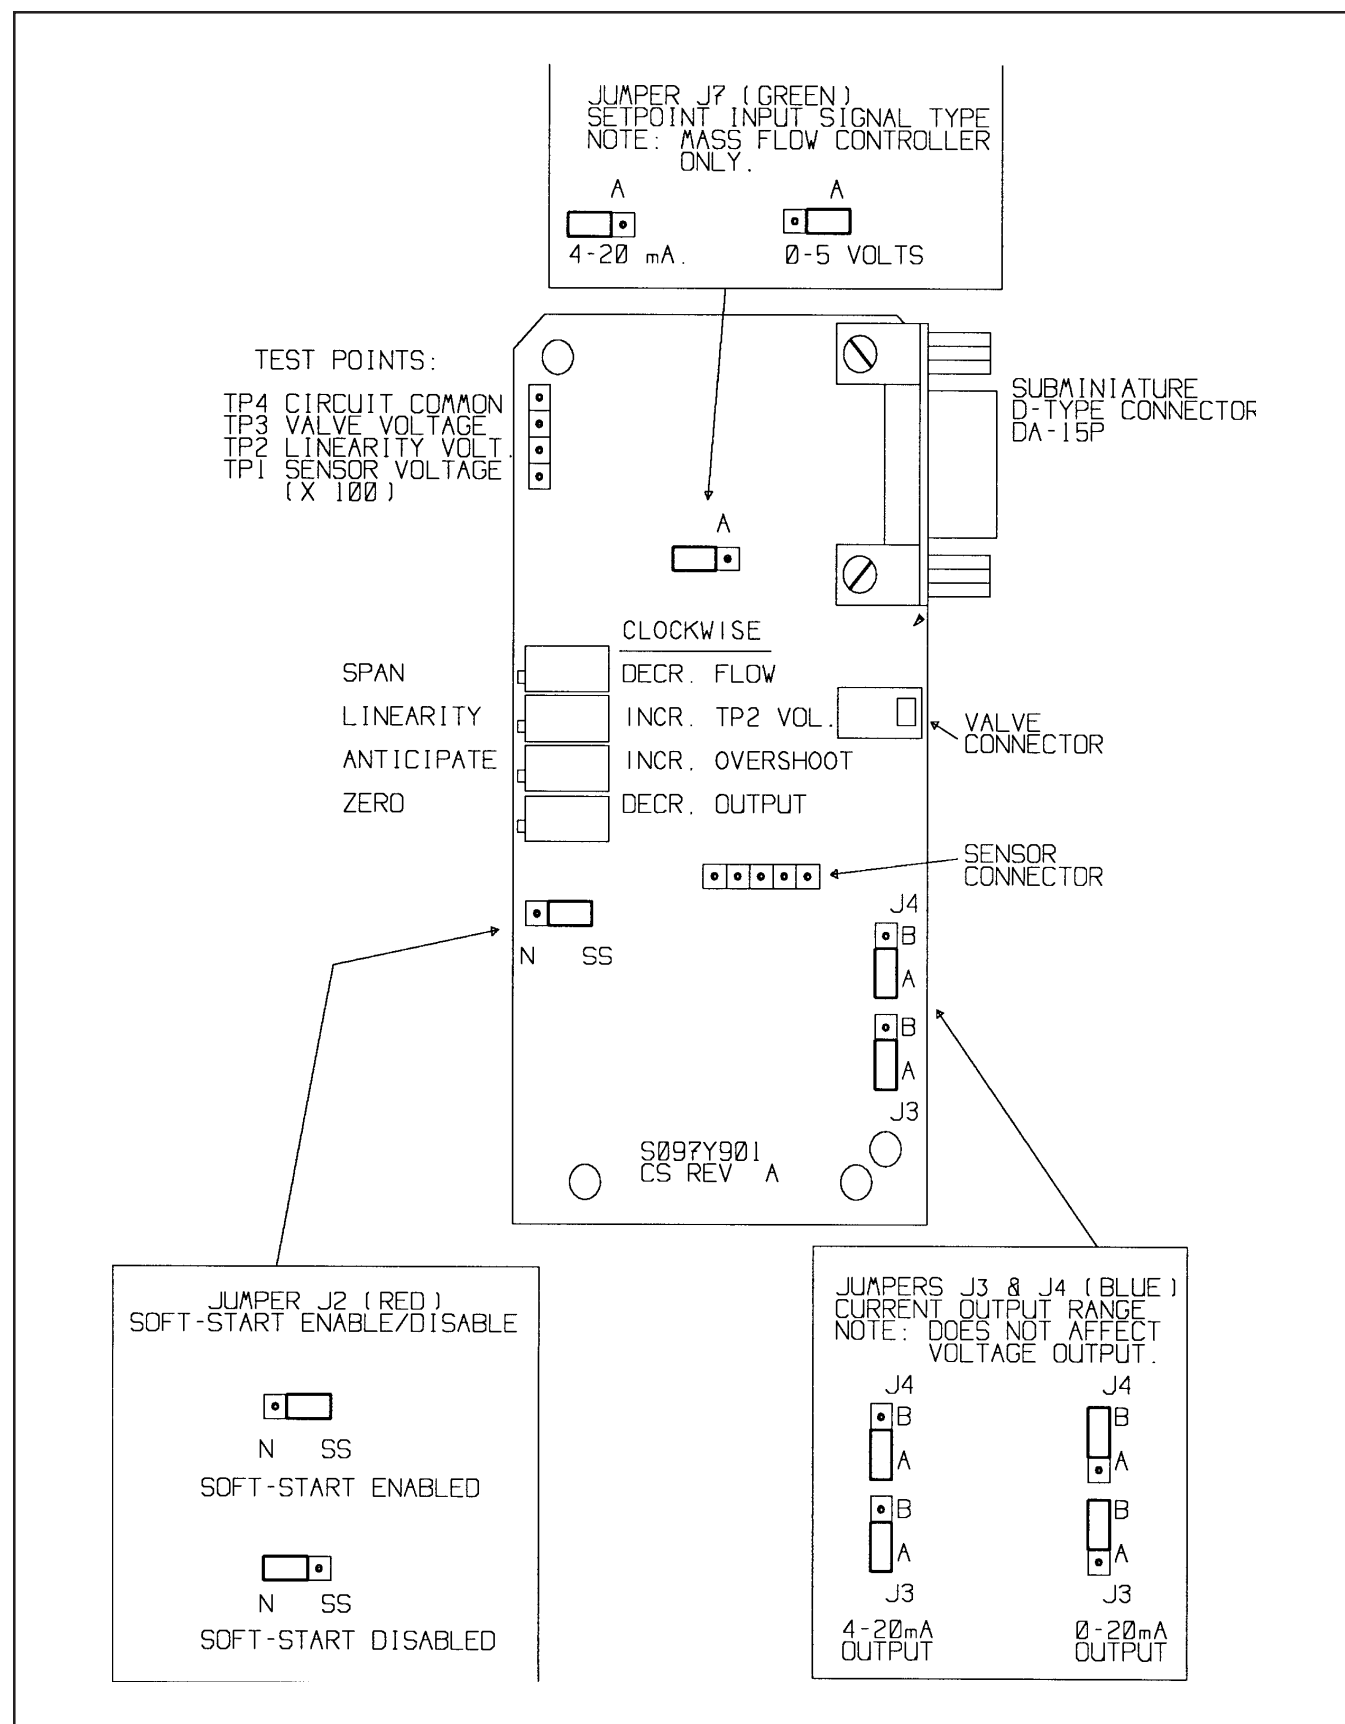


Figure 3-3 PC Board Jumper Location & Function

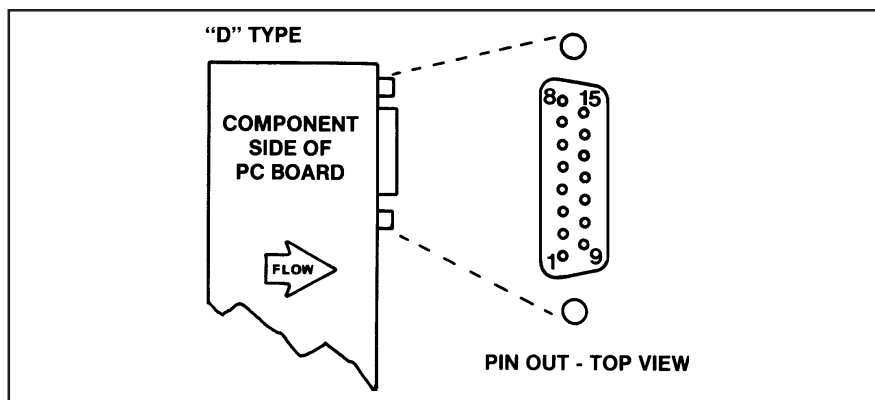


Figure 3-4 Model 5851i Calibration Connections

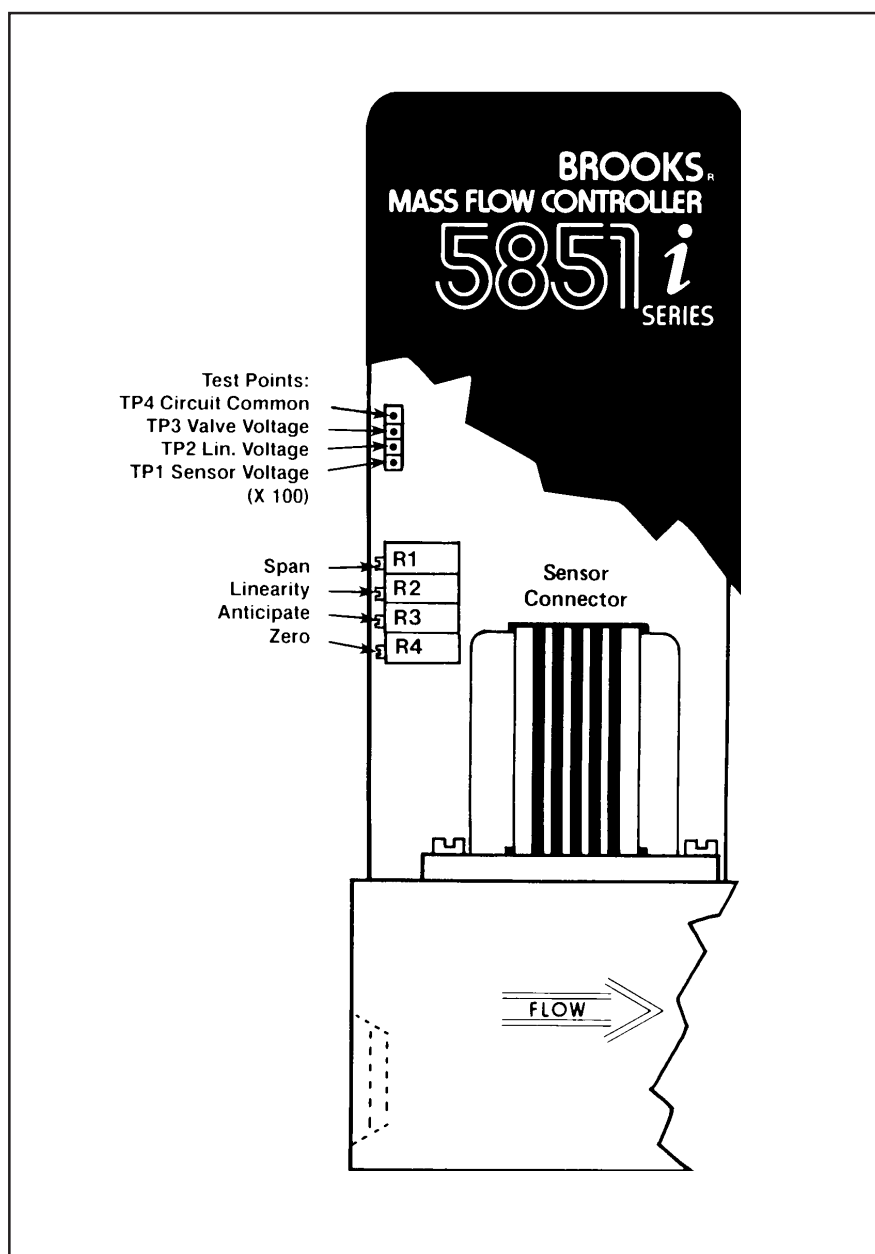


Figure 3-5 Adjustment Potentiometer Location

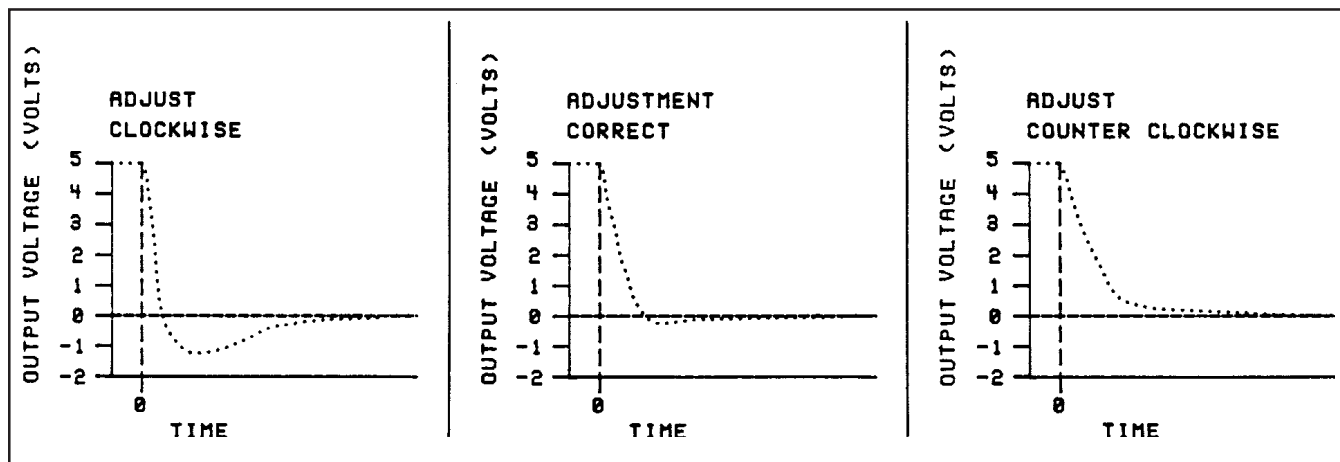


Figure 3-6 Fast Response Adjustment

- a. Set the command potentiometer for 100% flow (5.00V) and wait about 45 seconds for the flow output signal to stabilize.
 - b. Step the command signal to 0% or activate valve override closed to stop the flow. Observe the flow signal output as it decays.
 - c. The behavior of the flow signal during this transition between 100% and 0% flow indicates the adjustment required of the anticipate potentiometer. Refer to Figure 3-6.
 - d. If the flow signal measured on pin 2 decays to -0.05 to -0.5V, then rises to 0V, the anticipate potentiometer is properly adjusted.
 - e. If the flow signal decays rapidly and goes below -0.5V before rising to 0 V, the anticipate potentiometer must be adjusted clockwise and steps a and b repeated.
 - f. If the flow signal decays slowly and does not go below -0.05 V, the anticipate potentiometer must be adjusted counterclockwise and steps a and b repeated.
2. Fast response adjustment (six second response specification guaranteed)

Adjustment of the anticipate potentiometer to obtain a flow rate performance to be within 2% of flow rate commanded in less than six seconds after setpoint change requires the use of a fast response flowmeter (500 millisecond response to be within 0.2% of final value or better) in series with the 5851*i* and a storage oscilloscope or recorder.

- a. Allow the flow controller to stabilize at 0% setpoint for at least thirty seconds. Make a step in setpoint to the controller from 0-100% of full scale flow and record the output signal of the fast response flowmeter.
- b. If this signal shows more than 4% overshoot, adjust the anticipate potentiometer one-half to one turn counterclockwise. If the signal does not show overshoot but is not within 2% full scale of final value after six seconds, adjust the anticipate potentiometer one-half to one turn clockwise. Set command potentiometer for 0% of flow.
- c. Repeat steps a and b until the fast response flowmeter output signal meets the specified response requirements.

NOTE: With the above equipment, the anticipate potentiometer can be adjusted to give optimum response characteristics for any process.

*THIS PAGE WAS
INTENTIONALLY
LEFT BLANK*

4-1 General

No routine maintenance is required on the Model 5851*i* other than an occasional cleaning. If an in-line filter is used, the filtering element should periodically be replaced or ultrasonically cleaned.

4-2 Troubleshooting

CAUTION

It is important that this controller only be serviced by properly trained and qualified personnel.

A. System Checks

The 5851*i* is generally used as a component in gas handling systems which can be quite complex. This can make the task of isolating a malfunction in the system a difficult one. An incorrectly diagnosed malfunction can cause many hours of unnecessary downtime. If possible, make the following system checks before removing a suspected defective mass flow controller for bench troubleshooting or return, especially if the system is new:

1. Verify low resistance power supply connections and that the correct power supply voltage and signals are reaching and leaving the controller. The breakout board (P/N S273Z668AAA) listed in Section 5 will make this job much easier.
2. Verify that the process gas connections have been correctly terminated and leak checked.
3. If the mass flow controller appears to be functioning but cannot achieve setpoint, verify that sufficient inlet pressure and pressure drop are available at the controller to provide the required flow.
4. Verify that all user selectable jumpers are in their desired positions. Refer to Figure 3-3.

WARNING

If it becomes necessary to remove the controller from the system after exposure to toxic, pyrophoric, flammable or corrosive gas, purge the controller thoroughly with a dry inert gas such as Nitrogen before disconnection the gas connections. Failure to correctly purge the controller could result in fire, explosion or death. Corrosion or contamination of the mass flow controller, upon exposure to air, may also occur.

Brooks® Model 5851i

Table 4-1 Bench Troubleshooting

Trouble	Possible Cause	Check/Corrective Action
Actual flow overshoots setpoint by more than 5% full scale.	Anticipate potentiometer out of adjustment.	Adjust anticipate potentiometer. Refer to Section 3-5.
Output stays at zero regardless of setpoint and there is no flow through the controller.	Clogged Sensor. Refer to Section 4-4. Clogged Control Valve. Valve override input is grounded. Defective PC Board.	Clean sensor. Refer to cleaning. Check TP3 with the setpoint at 100%. If the voltage is greater than 11V, disassemble and repair the control valve. Refer to Sections 4-4c and 2-10. Check valve override input (Pin 12) Replace PC Board. Refer to Section 4-4.
Output signal stays at +6.8V or 26 mA regardless of command and there is flow through the controller.	Valve stuck open or leaky. +22.5V -28Vdc applied to the valve override input. Defective PC Board.	Clean and/or adjust control valve. Refer to cleaning procedure and/or Section 4-4C. Check the valve override terminal. (Pin 12) Replace PC Board. Refer to Section 4-4.
Output signal follows setpoint at higher setpoints but will not go below 2% (8% for all-metal seat).	Leaky control valve.	Disassemble and repair valve. Refer to Section 4-4C.
Output signal follows setpoint at lower setpoints but does not reach full scale.	Insufficient inlet pressure or pressure drop. Partially clogged sensor. Partially clogged valve. Valve out of adjustment. Valve guide spring failure.	Adjust pressure, inspect the filters and clean/replace as necessary. Check calibration. Refer to Section 3-4. Disassemble and repair control valve. Refer to Section 4-4. Adjust valve. Refer to Section 4-4. Controller oscillates (see below).
Controller grossly out of calibration. Flow is higher than desired.	Partially clogged sensor.	Clean sensor, refer to the cleaning procedure.
Controller grossly out of calibration. Flow is lower than desired.	Partially clogged restrictor.	Replace restrictor. Refer to Section 4-4.
Controller oscillates.	Pressure drop or inlet pressure excessive. Oversized orifice. Valve out of adjustment. Anticipate potentiometer out of adjustment. Faulty pressure regulator. Defective PC Board.	Adjust pressures. Check orifice size. Refer to Section 4-6. Adjust valve. Refer to Section 4-4. Adjust anticipate potentiometer. Refer to Section 3-5. Check regulator output. Replace PC Board. Refer to Section 4-4.

B. Bench Troubleshooting

1. Properly connect the mass flow controller to a +22.5-28 Vdc power supply, setpoint source and connect an output signal readout device (4-1/2 digit voltmeter recommended) to pins 2 and 10 of the D-connector (refer to Figure 2-2). Apply power, set the setpoint to zero and allow the controller to warm up for 45 minutes. Do not connect to a gas source at this time. Observe the output signal and, if necessary, perform the zero adjustment procedure (Section 3-3). If the output signal will not zero properly, refer to the sensor troubleshooting section and check the sensor. If the sensor is electrically functional, the printed circuit board is defective and will require replacement.
2. Connect the controller to a source of the gas on which it was originally calibrated. Command 100% flow and adjust the inlet and outlet pressures to the calibration conditions. Verify that the output signal reaches and stabilizes at 5.00 volts or 20mA. Vary the setpoint over the 2 to 100% range and verify that the output signal follows the setpoint. Apply +22.5-28 volts to the valve override input (pin 12) and verify that the output exceeds 100%. Connect the valve override pin to ground and verify that the output signal falls below 2%. If possible, connect a flow measurement device in series with the mass flow controller to observe the actual flow behavior and verify the accuracy of the mass flow controller. If the mass flow controller functions as described above, it is functioning properly and the problem may lie elsewhere.

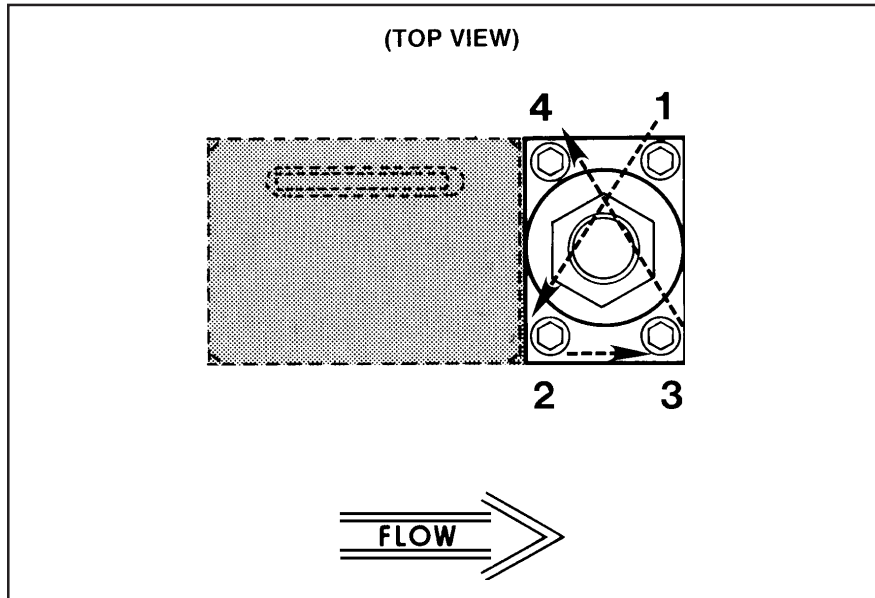


Figure 4-1 Torque Sequence for the Valve Retainer Plate

Table 4-1 lists possible malfunctions which may be encountered during bench troubleshooting.

C. Sensor Troubleshooting

The sensor tube is part of a calibrated flow divider that is designed to operate within a preset gas flow range. The sensor assembly may be removed or replaced by referring to Section 4-4, Disassembly and Assembly. If the sensor assembly is cleaned and reinstalled, a calibration check should be performed. Refer to Section 3-4.

NOTE: Do not attempt to disassemble the sensor.

D. Cleaning Procedures

Should the Model 5851i Mass Flow Controller require cleaning due to deposition, use the following procedures:

1. Remove the unit from the system.
2. Refer to Section 4-4 to disassemble the controller.

CAUTION

Do not soak the sensor assembly in a cleaning solution. If solvent seeps into the sensor assembly, it will probably damage the sensor, or, at least, significantly alter its operating characteristics.

3. Use a hemostat or tweezers to push a 0.007" diameter piano wire through the flow sensor tube to remove any contamination. For best results, push the wire into the downstream opening of the sensor tube (end closest to the control valve). The sensor tube can be flushed with a non-residuous solvent or DI water. A hypodermic needle filled with solvent is a convenient means to accomplish this.

Brooks® Model 5851i

Table 4-2 Sensor Troubleshooting

SENSOR SCHEMATIC

WIRE COLOR	PIN NO.	FUNCTION
White	4	Sensor common
Yellow	1	Heater
Blue	5	Heater common
Red	2	Upstream temperature sensor (Su)
Black	3	Downstream temperature sensor (Sd)

Note: Sensors manufactured before 9/88 used a wire harness interconnect, newer sensors use a "Flex" cable.

Flex Circuit Wire Numbers

OHMMETER CONNECTION	RESULT IF ELECTRICALLY FUNCTIONAL
Yellow and white to body (ground) (Pin 1 or 4 to body)	Open circuit on ohmmeter. If either heater (yellow), or sensor common (white) are shorted, an ohmmeter reading will be obtained.
White to red (Pin 4 to Pin 2)	Nominal 1100 ohms reading.
White to black (Pin 4 to Pin 3)	Depending on temperature and ohmmeter current.
Blue to yellow (Pin 5 to Pin 1)	Nominal 1200 ohm reading.

Note: Remove the sensor connector from the PC Board for this procedure.

An alternate method for flushing out the sensor is to replace the restrictor element with a low flow plug restrictor. This plug forces all the flow through the sensor and may dislodge any obstructions. With the valve orifice removed, subject the flow controller to a high differential pressure. Pressurizing the outlet of the MFC higher than the inlet may help force the obstruction upstream and out of the sensor tube.

- Inspect the orifice for clogging by holding it in front of a light source and looking for light through the bore. Clean by soaking in a suitable non-residuous solvent and directing a stream of compressed dry nitrogen through the bore.
- Deposits of silicon dioxide may be removed by soaking the internal parts in a solution of 5 parts hydrofluoric acid (HF) and 95 parts water (H₂O) followed by a non-residuous solvent or DI water.
- Restrictor elements can be cleaned in an ultrasonic bath or replaced. Refer to Section 4-7 for the correct restrictor to use.
- Blow all parts dry with dry nitrogen and reassemble. Refer to Section 4-4b (assembly).

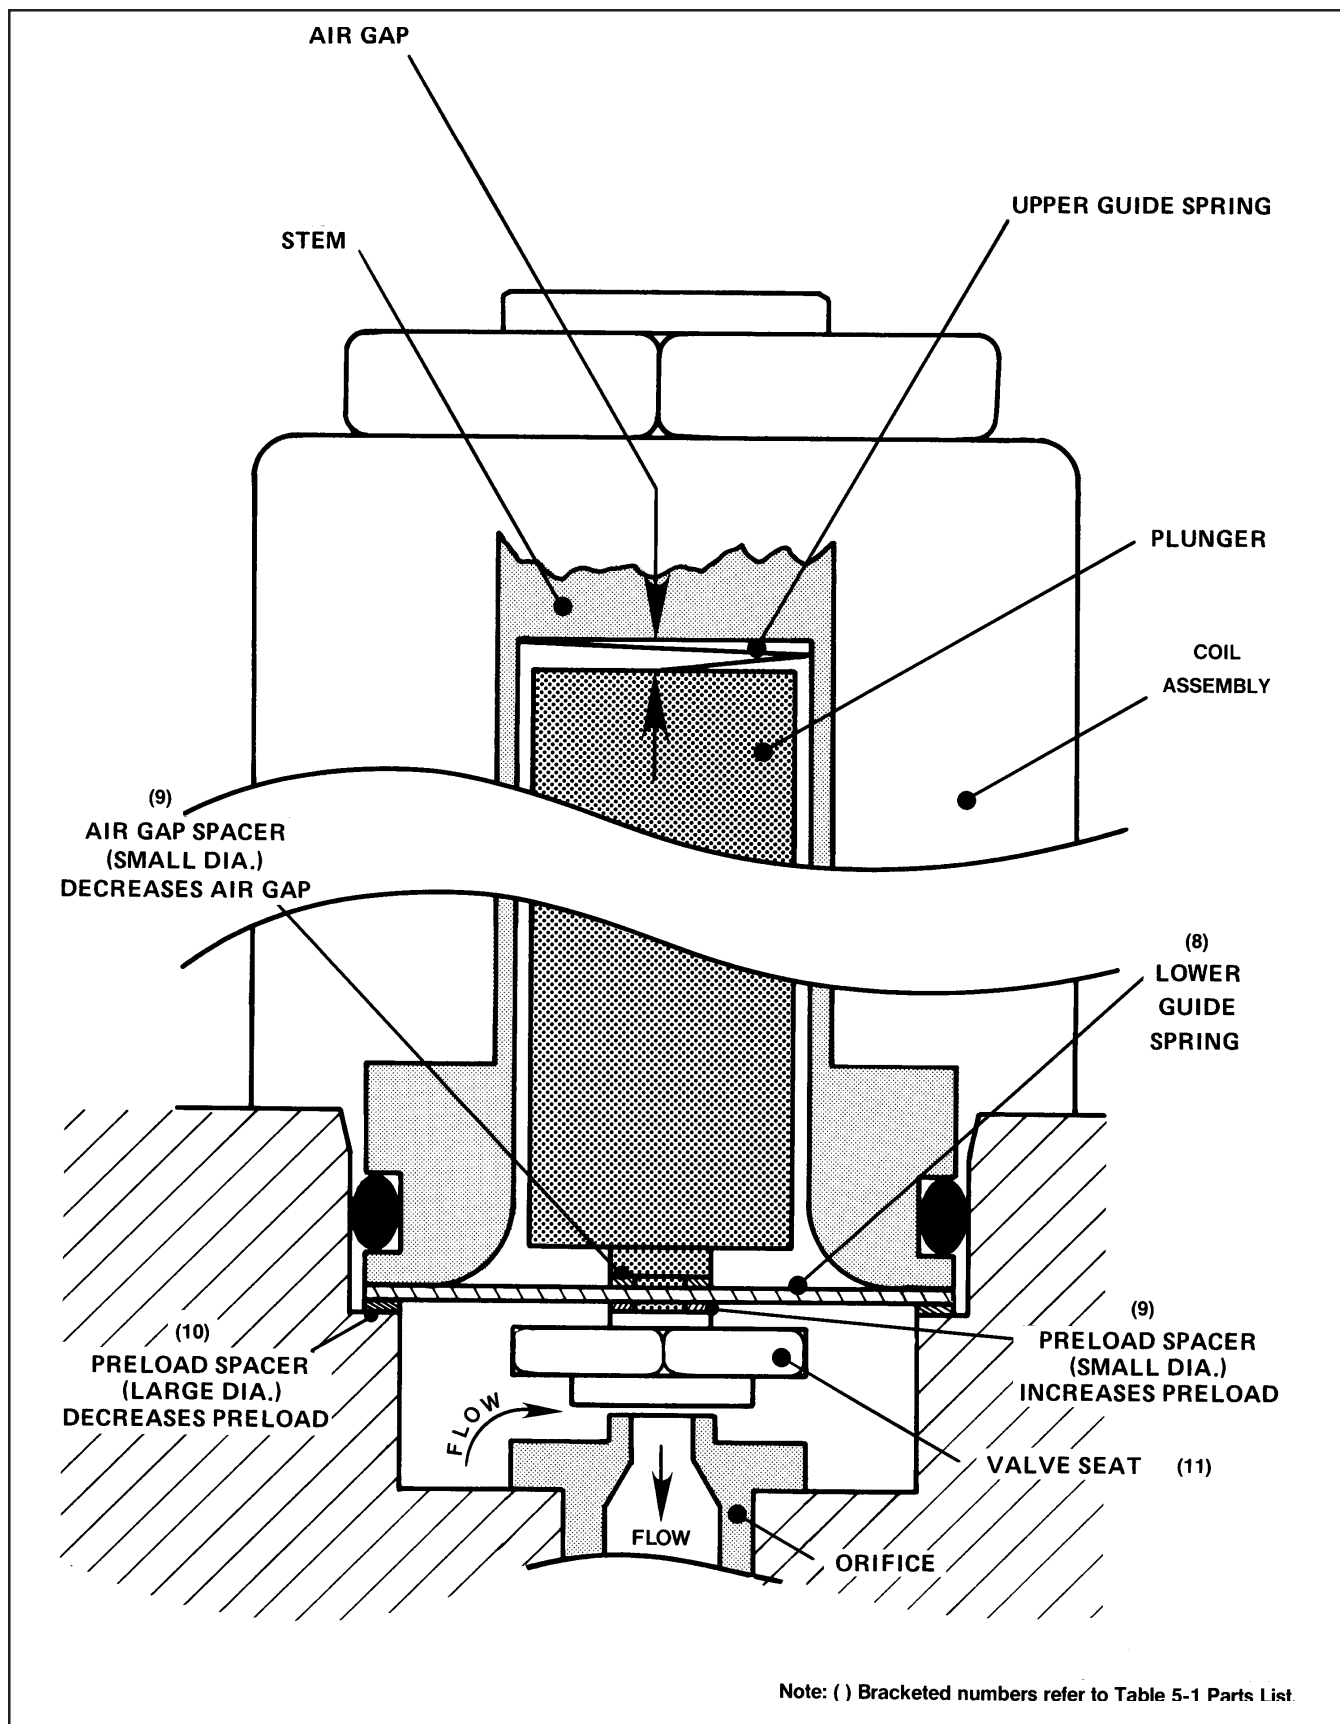


Figure 4-2 Valve Adjusting Spacer Locations

Brooks® Model 5851i

8. Purge the assembled controller with dry nitrogen.
9. Perform the calibration procedure in Section 3-4.
10. When the controller is re-installed in the system, the connections should be leak-tested and the system should be purged with dry nitrogen for 30 minutes prior to start-up to prevent the formation of deposits.

4-3 Sensor Tube

The sensor tube is part of a calibrated flow divider that is designed to operate within a preset gas flow range. The sensor assembly may be removed or replaced by referring to Section 4-4, Disassembly and Assembly. If the sensor assembly is cleaned and reinstalled, a calibration check should be performed. Refer to Section 3-4.

4-4 Disassembly and Assembly

The Model 5851i Mass Flow Controller may be disassembled in the field by the user for cleaning, reranging or servicing. Disassemble and assemble the controller as follows:

NOTE: The 5851i Mass Flow Controller should be disassembled and assembled in a clean environment to prevent particulate contamination.

A. Disassembly

The numbers in parentheses refer to the spare parts exploded view in Figure 5-1.

⚠ WARNING

If it becomes necessary to remove the controller from the system after exposure to toxic, pyrophoric, flammable or corrosive gas, purge the controller thoroughly with a dry inert gas such as nitrogen before disconnecting the gas connections. Do not attempt to disassemble the mass flow controller until pressure has been removed and purging has been performed. Failure to correctly purge the controller could result in hazardous gas being trapped in the valve assembly which could result in explosion, fire or serious injury/death. Corrosion or contamination of the mass flow controller upon exposure to air may also occur.

1. Remove the jam nut (1) on top of the valve assembly.
2. Unplug the valve connector from the electronics cover and remove the coil assembly (2).
3. Remove the hex socket screws (3) securing the valve retaining plate (4) attaching the valve stem assembly (6).

⚠ CAUTION

When performing the following procedure, the valve stem must be removed without cocking it to prevent damage to the valve spring.

4. Carefully remove the valve stem assembly (6).
5. Remove the plunger assembly (7, 8, 9 and 11).

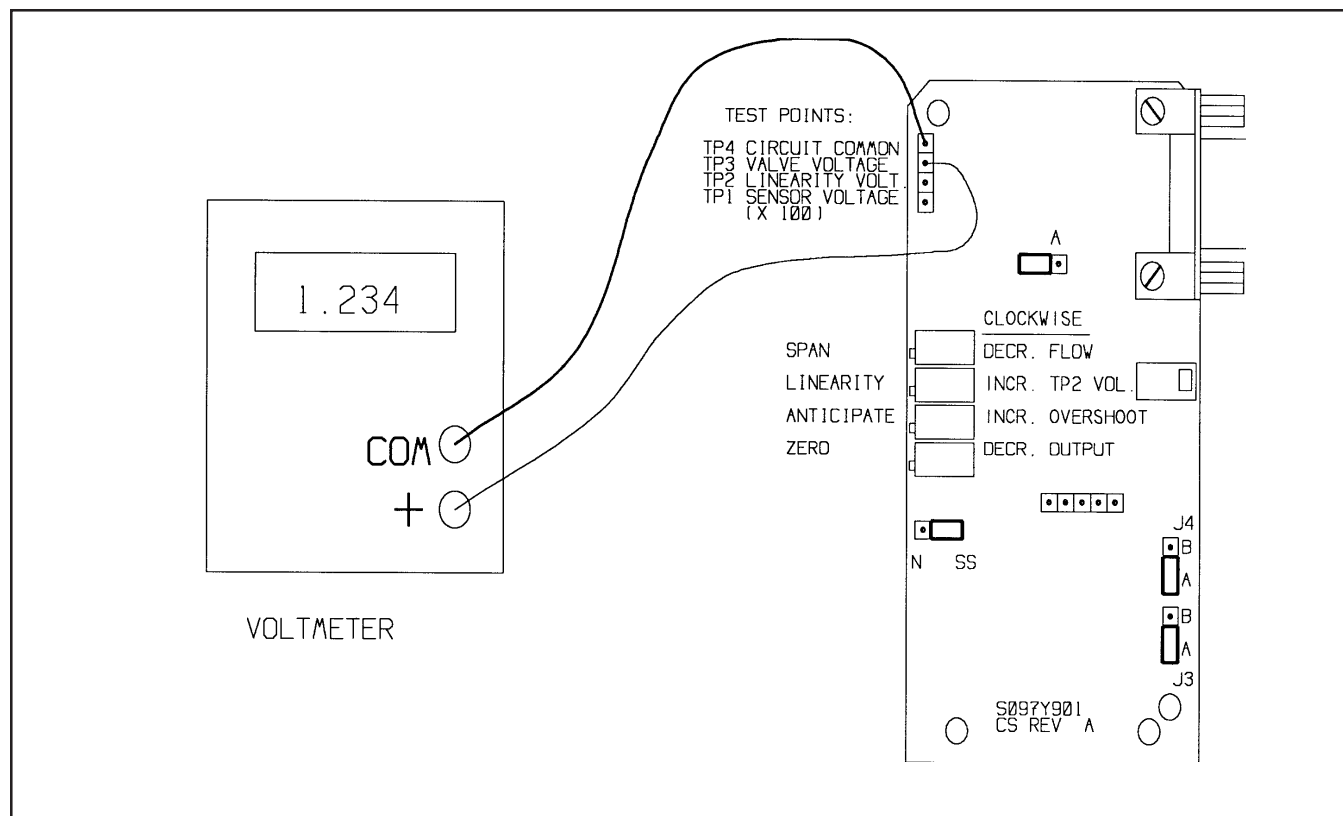


Figure 4-3 Voltmeter Connections for Valve Adjustment

6. Remove and note the position of the valve spring spacers (10) which may be located above and/or below the lower valve springs (8).
7. Unscrew the orifice (12) from the flow controller body (14) using the orifice removal tool. (See Section 5, Table 5-2.)
8. Remove the three screws (20) attaching the electronics cover. Remove the upper jack post on the D-connector. Remove the electronics cover (23).

CAUTION

Be careful not to stress the sensor lead wire to sensor assembly junction when removing the sensor connector from the PC Board. If the sensor lead wires are stressed an opening in the sensor wiring could result.

9. Unplug the sensor connector from the PC Board. Remove the two screws (20) securing the bracket (24) and PC Board (15). Remove the bracket and PC Board.
10. Remove the two hex head screws (18) using a 1/8" hex wrench, and washers (19) securing the sensor assembly (16). Remove the sensor assembly.

NOTE: Do not attempt to disassemble the sensor assembly.

CAUTION

Do not scratch the O-ring sealing service.

11. Remove the sensor assembly O-rings (17) from the flow controller body (14). Using the Brooks O-ring removal tool will help prevent scratching the sealing surface.

Brooks® Model 5851i

12. Remove the adapter fittings and O-rings (27) from the flow controller body (14).
13. Remove the four screws (29) from the end block (28) and carefully remove the end block.
14. Remove the restrictor assembly (21) from the inlet side of the flow controller body (14) using the header removal tool (Section 5, Table 5-2). Note the rotational position of the restrictor assembly. (Refer to Section 4-7)

B. ASSEMBLY**⚠ CAUTION**

Be careful not to stress the sensor lead wire to sensor assembly junction when removing the sensor connector from the PC Board. If the sensor lead wires are stressed an opening in the sensor wiring could result.

NOTE: It is recommended that all O-rings be replaced during controller assembly. All O-rings should be lightly lubricated with Fomblin lubricant (part of O-ring kit, Section 5) prior to their installation.

1. Examine all parts for signs of wear or damage, replace as necessary.
2. See Section 4-7 Restrictor Sizing, Assembly Procedures, Steps 1 through 3 on Page 22.

⚠ CAUTION

The following steps must be performed as written. Placing the O-rings on the sensor before it is installed will result in damage to the O-rings causing a leak.

3. Place the end block O-ring in position and install the end block with the four hex socket screws. Tighten these screws to 49 inch-lbs. Do not overtighten.

⚠ CAUTION

Do not scratch the O-ring sealing service.

4. Press the lubricated sensor O-rings (17) into the flow controller body (14). Install the sensor assembly and secure with two screws (18) and washers (19) and tighten to 15 in./lbs.
5. Install the orifice (12) and its O-ring (13) using a 3/8 nut driver. Insure that the orifice is fully seated but do not overtighten.
6. Insert the valve preload spacers (10), if used, into the valve cavity in the flow controller body (14). Use care to preserve the correct order.
7. Install the valve plunger assembly (7, 8, 9 and 11) on the preload spacers (10). Install air gap spacers (10), if used, on top of the valve springs.
8. Install the valve stem assembly (6), secure with the valve retaining plate (4) and four hex socket screws (3). When installing the screws, they should first make light contact with the plate which should be checked to insure that it makes full contact around the stem assembly. Torque the screws securing the valve retaining plate in a diagonal pattern (Refer to Figure 4-1) to 15 in./lbs.

9. Install the coil assembly (2) over the valve stem assembly (6) and secure with a jam nut (1).
10. Install the PC Board (15), secure with the bracket (24) and two screws. Plug the connector from the sensor assembly onto the PC Board. The flow arrow on the connector should be pointing toward the valve assembly.
11. Install the electronics cover (23) on the controller, secure with three screws (20). Plug the connector from the valve coil into the PC Board through the hole in the electronics cover.
12. Prior to installation, leak and pressure test to any applicable pressure requirements.

C. Adjusting the Control Valve

The 5851*i* control valve has been factory adjusted to insure proper operation. Readjustment is only required if any of the following parts have been replaced:

- orifice (12)
- valve stem (6)
- plunger (7)
- lower guide springs (8)
- valve seat (11)

The valve is adjusted in Brooks Mass Flow Controllers by adding spacers (9 and 10) to the control valve assembly to vary the air gap and initial preload. Spacers are used to affect the proper adjustment because they provide a reliable and repeatable means for adjustment. Screw type adjustment mechanisms can change with pressure or vibration and introduce an additional dynamic seal that is a potential leak site and source for contamination. Refer to Figure 4-2 for spacer locations.

The preload determines the initial force that is required to raise the valve seat off the orifice and start gas flow. If the preload is insufficient, the valve will not fully close and gas will leak through. If the preload is excessive, the magnetic force generated between the plunger and stem will be insufficient to raise the plunger and the valve will not open.

The air gap is the space between the top of the plunger and stem. The air gap determines the force between the plunger and stem at a given voltage and the total travel of the valve. If the air gap is too small, the plunger travel may be insufficient to fully open the valve. Also, the magnetic force may be too high for a given valve coil voltage. If the air gap is too large, the magnetic force will be insufficient to raise the plunger and the valve will not open.

NOTE: Prior to starting the valve adjustment procedure, check to insure that the orifice is properly seated and that the valve parts are not bent or damaged.

Adjustment Procedure

(Refer to Section 5, Spare Parts for Spacer Kit)

- a. Remove the electronics cover (23) from the controller. Insure that the connector from the coil assembly (2) is properly reconnected to the PC Board after the electronics cover is removed.
- b. Perform the electrical and gas connections to the controller following the instructions in Section 2 of this manual. Use a clean dry inert gas, such as nitrogen, for this procedure. Do not apply gas pressure to the controller at this time.

Brooks® Model 5851i

- c. Disassemble the control valve following the procedure given in Section 4-4A above. Note the number, locations and thicknesses of all spacers (9 and 10).
- d. Decrease the preload of the valve by 0.005 inches by either removing a 0.005-inch small preload spacer or by adding a 0.005-inch large preload spacer. Refer to Figure 4-2.
- e. Reassemble the valve following the assembly procedure in Section 4-4a.
- f. Adjust setpoint for zero percent flow, apply normal operating pressure and check for valve leak-through by observing the output signal.
- g. If the valve leaks through, increase the preload by 0.005" and go to Step h. If the valve does not leak through, repeat Steps d, e, f and g.
- h. Apply normal operating gas pressure and adjust setpoint for 100% flow (5.000 Volts on terminal A, Pin 2).

Note: Due to possible heat capacity and density differences between the test gas and actual process gas for which the MFC was sized, it may be necessary to increase the inlet pressure to obtain proper control at 100% flow.

- i. Measure the valve voltage by connecting a voltmeter between test point 3 (TP3) and test point 4 (TP4). Refer to Figure 4-3.
- j1. If the flow controller output signal is 100% and the valve voltage is less than 11.5 V, the valve adjustment is complete.
- j2. If the flow controller output signal is 100% and the valve voltage is greater than 11.5 V, decrease the air gap with a small 0.005 inch air gap spacer. Refer to Figure 4-2. Repeat Steps h and i.
- j3. If the flow controller output signal is less than 100% and the valve voltage is greater than 11.5 V, this condition indicates that the inlet pressure is too low and/or the orifice size is too small. First check Section 4-6 to insure that the orifice size is correct.
- k. Proceed to Section 3 and perform "3-4 Calibration Procedure," if required.

4-5 Use of the Conversion Tables

If a mass flow controller is operated on a gas other than the gas it was calibrated with, a scale shift will occur in the relation between the output signal and the mass flow rate. This is due to the difference in heat capacities between the two gases. This scale shift can be approximated by using the ratio of the molar specific heat of the two gases or by sensor conversion factor. Table 4-3 has a list of sensor conversion factors. To change to a new gas, multiply the output reading by the ratio of the gas factor for the desired gas by the gas factor for the calibration gas used.

$$\text{Actual gas flow rate} = \text{Output reading} \times \frac{\text{factor of the new gas}}{\text{factor of the calibrated gas}}$$

Example:

The controller is calibrated for Nitrogen.

The desired gas is Carbon Dioxide.

The output reading is 75 sccm when Carbon Dioxide is flowing.

Then $75 \times 0.778 = 58.35$ sccm

In order to calculate the conversion factor for a gas mixture, the following formula should be used:

$$\text{Sensor Conversion Factor}_{\text{Mixture}} = \frac{\frac{100}{P_1}}{\text{Sensor Conversion Factor}_1} + \frac{\frac{100}{P_2}}{\text{Sensor Conversion Factor}_2} + \frac{\frac{100}{P_3}}{\text{Sensor Conversion Factor}_3}$$

Where,

P1 = percentage (%) of gas 1 (by volume)

P2 = percentage (%) of gas 2 (by volume)

Pn = percentage (%) of gas n (by volume)

Example: The desired gas is 20% Helium (He) and 80% Chlorine (Cl) by volume. The desired full scale flow rate of the mixture is 20 slpm. Sensor conversion factor for the mixture is:

$$\text{Mixture Factor} = \frac{\frac{100}{20}}{1.387} + \frac{\frac{100}{80}}{.828} = .901$$

$$\text{Nitrogen equivalent flow} = 20/.901 = 22.20 \text{ slpm Nitrogen}$$

It is generally accepted that the mass flow rate derived from this equation is only accurate to $\pm 5\%$. The sensor conversion factors given in Table 4-3 are calculated based on a gas temperature of 21°C and a pressure of one atmosphere. The specific heat of most gases is not strongly pressure- and/or temperature-dependent. However, gas conditions that vary widely, from these reference conditions, may cause an additional error due to the change in specific heat caused by temperature and/or pressure.

4-6 Use of Orifice Sizing Nomograph

The Orifice Sizing Nomograph, Figure 4-5, is used to calculate the control valve's orifice size when changing any or all of the following factors from the original factory calibration:

gas
operating pressure (inlet and outlet)
flow range

The flow controller's orifice is factory-sized to a preselected gas, operating pressure and flow range. Note that the orifice is marked with its size in thousandths of an inch. When changing the aforementioned factors, calculate the new orifice size by following the procedure and example outlined in the following paragraphs.

Example: Determine the orifice size for the following conditions:

Gas: Hydrogen

Brooks® Model 5851i

Table 4-3. Conversion Factors (Nitrogen Base).

GAS NAME	FORMULA	SENSOR FACTOR	ORIFICE FACTOR	DENSITY (kg/m ³)
Acetylene	C ₂ H ₂	0.615	0.970	1.173
Air	Mixture	0.998	1.018	1.293
Allene	C ₃ H ₄	0.478	1.199	1.787
Ammonia	NH ₃	0.786	0.781	0.771
Argon	Ar	1.395	1.195	1.784
Arsine	AsH ₃	0.754	1.661	3.478
Boron Trichloride	BCL ₃	0.443	2.044	5.227
Boron Trifluoride	BF ₃	0.579	1.569	3.025
Bromine Pentafluoride	BrF ₅	0.287	2.502	7.806
Bromine Trifluoride	BrF ₃	0.439	2.214	6.108
Bromotrifluoroethylene	C ₂ BrF ₃	0.326	2.397	7.165
Bromotrifluoromethane f-13B1	CBrF ₃	0.412	2.303	6.615
1,3-Butadiene	C ₄ H ₆	0.354	1.413	2.491
Butane	C ₄ H ₁₀	0.257	1.467	2.593
1-Butene	C ₄ H ₈	0.294	1.435	2.503
CIS-2-Butene	C ₄ H ₈	0.320	1.435	2.503
Trans-2-Butene	C ₄ H ₈	0.291	1.435	2.503
Carbon Dioxide	CO ₂	0.740	1.255	1.977
Carbon Disulfide	CS ₂	0.638	1.650	3.393
Carbon Monoxide	CO	0.995	1.000	1.250
Carbon Tetrachloride	CCl ₄	0.344	2.345	6.860
Carbon Tetrafluoride f-14	CF ₄	0.440	1.770	3.926
Carbonyl Fluoride	COF ₂	0.567	1.555	2.045
Carbonyl Sulfide	COS	0.680	1.463	2.180
Chlorine	Cl ₂	0.876	1.598	3.214
Chlorine Dioxide	ClO ₂	0.693	1.554	3.011
Chlorine Trifluoride	ClF ₃	0.433	1.812	4.125
2-Chlorobutane	C ₄ H ₉ Cl	0.234	1.818	4.134
Chlorodifluoromethane f-22	CHClF ₂	0.505	1.770	3.906
Chloroform (Trichloromethane)	CHCl ₃	0.442	2.066	5.340
Chloropentafluoroethane f-115	C ₂ ClF ₅	0.243	2.397	7.165
Chlorotrifluoroethylene	C ₂ ClF ₃	0.337	2.044	5.208
Chlorotrifluoromethane f-13	CCLF ₃	0.430	1.985	4.912
Cyanogen	(CN) ₂	0.498	1.366	2.322
Cyanogen Chloride	CLCN	0.618	1.480	2.730
Cyclobutane	C ₄ H ₈	0.387	1.413	2.491
Cyclopropane	C ₃ H ₆	0.505	1.224	1.877
Deuterium	D ₂	0.995	0.379	0.177
Diborane	B ₂ H ₆	0.448	1.000	1.235
Dibromodifluoromethane f-12B2	CB ₂ F ₂	0.363	2.652	8.768
1,2-Dibromotetrafluoroethane f-114B2	C ₂ Br ₂ F ₄	0.215	2.905	10.53
Dichlorodifluoromethane f-12	CCL ₂ F ₂	0.390	2.099	5.492
Dichlorofluoromethane f-21	CHCl ₂ F	0.456	1.985	4.912
Dichlorosilane	SiH ₂ Cl ₂	0.442	1.897	4.506
1,2-Dichloroethane	C ₂ H ₄ Cl ₂	0.382	1.879	4.419
1,2-Dichlorotetrafluoroethane f-114	C ₂ Cl ₂ F ₄	0.231	2.449	7.479
2,2 Dichloro	C ₂ HCl ₂ F ₃	0.259	2.336	6.829
1,1-Difluoro-1-Chloroethane	C ₂ H ₃ ClF ₂	0.341	1.957	4.776
1,1-Difluoroethane	CH ₃ CHF ₂	0.415	1.536	2.940
1,1-Difluoroethylene	CH ₂ CF ₂	0.458	1.512	2.860
Diethylsilane	C ₄ H ₁₂ Si	0.183	1.775	3.940
Difluoromethane f-32	CF ₂ H ₂	0.627	1.360	2.411
Dimethylamine	(CH ₃) ₂ NH	0.370	1.269	2.013
Dimethylether	(CH ₃) ₂ O	0.392	1.281	2.055
2,2-Dimethylpropane	C(CH ₃) ₄	0.247	1.613	3.244
Disilane	Si ₂ H ₆	0.332	1.493	2.779
Ethane	C ₂ H ₆	0.490	1.038	1.357
Ethanol	C ₂ H ₅ O	0.394	1.282	2.057
Ethylacetylene	C ₄ H ₆	0.365	1.384	2.388
Ethyl Chloride	C ₂ H ₅ Cl	0.408	1.516	2.879
Ethylene	C ₂ H ₄	0.619	1.000	1.261
Ethylene Oxide	C ₂ H ₄ O	0.589	1.254	1.965
Fluorine	F ₂	0.924	1.163	1.695
Fluoroform f-23	CHF ₃	0.529	1.584	3.127
Germane	GeH ₄	0.649	1.653	3.418
Germanium Tetrachloride	GeCl ₄	0.268	2.766	9.574
Halothane (R-123B1)	C ₂ HBrClF ₃	0.257	2.654	8.814
Helium	He	1.386	0.378	0.178
Hexafluoroacetone	F ₃ CCOCF ₃	0.219	2.434	7.414
Hexafluorobenzene	C ₆ F ₆	0.632	2.577	8.309
Hexafluoroethane f-116	C ₂ F ₆	0.255	2.219	6.139
Hexafluoropropylene (HFP)	C ₃ F ₆	0.249	2.312	6.663
Hexamethyldisilane (HMDS)	(CH ₃) ₆ Si ₂	0.139	2.404	7.208
Hexane	C ₆ H ₁₄	0.204	1.757	3.847

Table 4-3. Conversion Factors (Nitrogen Base) Continued.

GAS NAME	FORMULA	SENSOR FACTOR	ORIFICE FACTOR	DENSITY (kg/m ³)
Hydrogen	H ₂	1.008	0.269	0.090
Hydrogen Bromide	HBr	0.987	1.695	3.645
Hydrogen Chloride	HCL	0.983	1.141	1.639
Hydrogen Cyanide	HCN	0.744	0.973	1.179
Hydrogen Fluoride	HF	0.998	0.845	0.893
Hydrogen Iodide	HI	0.953	2.144	5.789
Hydrogen Selenide	H ₂ Se	0.837	1.695	3.613
Hydrogen Sulfide	H ₂ S	0.850	1.108	1.539
Iodine Pentafluoride	IF ₅	0.283	2.819	9.907
Isobutane	C ₄ H ₁₀	0.260	1.440	2.593
Isobutene	C ₄ H ₈	0.289	1.435	2.503
Isopentane	C ₅ H ₁₂	0.211	1.605	3.222
Krypton	Kr	1.382	1.729	3.708
Methane	CH ₄	0.763	0.763	0.717
Methylacetylene	C ₃ H ₄	0.473	1.196	1.782
Methyl Bromide	CH ₃ Br	0.646	1.834	4.236
3-Methyl-1-butene	C ₅ H ₁₀	0.252	1.584	3.127
Methyl Chloride	CH ₃ CL	0.687	1.347	2.308
Methyl Fluoride	CH ₃ F	0.761	1.102	1.518
Methyl Mercaptan	CH ₃ S	0.588	1.313	2.146
Methyl Silane	CH ₃ Si	0.393	1.283	2.061
Methyl Trichlorosilane (MTS)	CH ₃ Cl ₃ Si	0.267	2.310	6.675
Methyl Vinyl Ether	C ₃ H ₆ O	0.377	1.435	2.567
Monoethanolamine	C ₂ H ₅ NO	0.305	1.477	2.728
Monoethylamine	C ₂ H ₅ NH ₂	0.359	1.269	2.013
Monomethylamine	CH ₃ NH ₂	0.565	1.067	1.420
Neon	Ne	1.398	0.847	0.902
Nickel Carbonyl	Ni(CO) ₄	0.212	2.371	7.008
Nitric Oxide	NO	0.995	1.030	1.339
Nitrogen	N ₂	1.000	1.000	1.251
Nitrogen Dioxide	NO ₂	0.758	1.713	2.052
Nitrogen Trifluoride	NF ₃	0.501	1.598	3.168
Nitrogen Trioxide	N ₂ O ₃	0.443	1.649	3.389
Nitrosyl Chloride	NOCL	0.644	1.529	2.913
Nitrous Oxide	N ₂ O	0.752	1.259	1.964
Octafluorocyclobutane	C ₄ F ₈	0.169	2.672	8.933
Oxygen	O ₂	0.988	1.067	1.429
Oxygen Difluoride	OF ₂	0.672	1.388	2.402
Ozone	O ₃	0.738	1.310	2.138
Pentafluorethane f-125	C ₂ HF ₅	0.287	2.070	5.360
Pentane (n-Pentane)	C ₅ H ₁₂	0.212	1.605	3.222
Perchloryl Fluoride	ClO ₃ F	0.448	1.905	4.571
Perfluorobutane	C ₄ F ₁₀	0.738	2.918	10.61
Perfluoro-2-Butene	C ₄ F ₈	0.268	2.672	8.933
Perfluoromethyl-vinylether	PMVE	0.296	2.029	5.131
Perfluoropropane	C ₃ F ₈	0.179	2.591	8.396
Pentane (n-Pentane)	C ₅ H ₁₂	0.212	1.605	3.222
Phosgene	COCL ₂	0.504	1.881	4.418
Phosphine	PH ₃	0.783	1.100	1.517
Phosphorous Pentafluoride	PF ₅	0.346	2.109	5.620
Phosphorous Trifluoride	PF ₃	0.495	1.770	3.906
Propane (same as CH ₃ CH ₂ CH ₃)	C ₃ H ₈	0.343	1.274	2.008
Propylene (Propene)	C ₃ H ₆	0.401	1.234	1.875
Rhenium Hexafluoride	ReF ₆	0.230	3.279	13.41
Silane	SiH ₄	0.625	1.070	1.440
Silicon Tetrachloride	SiCL ₄	0.310	2.465	7.579
Silicon Tetrafluoride	SiF ₄	0.395	1.931	4.648
Sulfur Dioxide	SO ₂	0.728	1.529	2.858
Sulfur Hexafluoride	SF ₆	0.270	2.348	6.516
Sulfur Tetrafluoride	SF ₄	0.353	1.957	4.776
Sulfur Trioxide	SO ₃	0.535	1.691	3.575
Sulfuryl Fluoride	SO ₂ F ₂	0.423	1.931	4.648
Tetrachloromethane	CCl ₄	0.344	2.345	6.858
Tetrafluoroethylene (TFE)	C ₂ F ₄	0.361	1.905	4.526
Tetrafluorohydrazine	N ₂ F ₄	0.367	1.926	4.624
Trichlorofluoromethane f-11	CCl ₃ F	0.374	2.244	6.281
Trichlorosilane	SiHCL ₃	0.329	2.201	6.038
Trimethyloxyborane (TMB)	B(OCH ₃) ₃	0.300	1.929	4.638
1,1,2-Trichloro-1,1,2-Trifluoroet f-113	C ₂ Cl ₃ F ₃	0.231	2.520	7.920
Trimethylamine	(CH ₃) ₃ N	0.316	1.467	2.639
Tungsten Hexafluoride	WF ₆	0.227	3.264	13.28
Uranium Hexafluoride	UF ₆	0.220	3.548	15.70
Vinyl Bromide	C ₂ H ₃ Br	0.524	1.985	4.772
Vinyl Chloride	C ₂ H ₃ CL	0.542	1.492	2.788
Vinyl Fluoride	C ₂ H ₃ F	0.576	1.281	2.046
Water Vapor	H ₂ O	0.861	0.802	0.804
Xenon	Xe	1.383	2.180	5.851

Brooks® Model 5851i

Flow Rate: 100 slpm
 Outlet Pressure: 30 psig
 Inlet Pressure: 50 psig

1. Determine Nitrogen equivalent flow rate (refer to Table 4-3).

$$Q_{\text{NITROGEN}} = Q_{\text{GAS}} \times \sqrt{\frac{\rho_{\text{GAS}}}{\rho_{\text{NITROGEN}}}}$$

OR

$$Q_{\text{NITROGEN}} = Q_{\text{GAS}} \times \sqrt{\frac{SG_{\text{GAS}}}{SG_{\text{NITROGEN}}}}$$

Q_{Nitrogen}	=	Nitrogen equivalent flow rate (sccm)
Q_{gas}	=	Desired flow rate of the gas (sccm)
D_{Nitrogen}	=	Density of Nitrogen at 70°F
D_{gas}	=	Density of the gas (taken at customer temperature)
SG_{gas}	=	Specific gravity of the gas (taken at customer temperature)

Refer to Table 4-3 for specific gravities.

Example:

$$\begin{aligned}
 Q_{\text{GAS}} &= 100 \text{ slpm} \\
 \sqrt{\frac{SG_{\text{GAS}}}{SG_{\text{NITROGEN}}}} &= .269 \\
 Q_{\text{NITROGEN}} &= Q_{\text{GAS}} \times \sqrt{\frac{SG_{\text{GAS}}}{SG_{\text{NITROGEN}}}} \\
 &= 100 \times .269 \\
 &= 26.9 \text{ slpm Nitrogen}
 \end{aligned}$$

In order to calculate the orifice conversion factor when using a gas mixture, the following formula must be used:

$$\text{Orifice Conversion Factor Mixture} = \sqrt{\frac{P_1 \left(\text{Orifice Conversion Factor 1} \right) + P_2 \left(\text{Orifice Conversion Factor 2} \right) + P_n \left(\text{Orifice Conversion Factor n} \right)}{100}}$$

Where P_1 = percentage by volume of gas 1
 P_2 = percentage by volume of gas 2
 P_n = percentage by volume of gas n

Example: Find the Nitrogen equivalent flow for 20 slpm of a 20% Helium and 80% Chlorine gas mixture.

$$\text{Orifice Conversion Factor Mixture} = \sqrt{\frac{20(.378)^2}{100} + \frac{80(1.598)^2}{100}}$$

$$\begin{aligned} Q_{\text{Nitrogen}} &= Q_{\text{gas}} (\text{orifice conversion factor}) \\ &= 20 \times 1.439 \\ &= 28.34 \text{ slpm Nitrogen} \end{aligned}$$

2. If inlet and outlet pressures are given in gauge pressure (psig) add 14.7 to convert to absolute pressure (psia).

$$\begin{aligned} \text{Outlet Pressure} &= 30 \text{ psig} + 14.7 = 44.7 \text{ psia} \\ \text{Inlet Pressure} &= 50 \text{ psig} + 14.7 = 64.7 \text{ psia} \end{aligned}$$

3. Determine Critical Pressure Drop
Critical pressure drop occurs when the outlet pressure (psia) is less than half the inlet pressure (psia) or

$$P_{\text{outlet}} < \frac{P_{\text{inlet}}}{2}$$

If these conditions exist, the pressure drop (Δp) should be calculated as follows:

$$\Delta P = \frac{P_{\text{in}}}{2}$$

$$\Delta P = \text{Pressure Drop (psi)}$$

$$P_{\text{in}} = \text{Inlet Pressure (psia)}$$

If these conditions do not exist, pressure drop equals the inlet pressure minus the outlet pressure.

$$\text{Is } 44.7 \text{ psia} < \frac{64.7 \text{ psia}}{2} ? \quad \text{—} \quad \text{No.}$$

$$\text{Then } \Delta p = 64.7 - 44.7 = 20 \text{ psi}$$

4. Using the nomograph, locate the pressure drop (psi) on the vertical line marked "Dp" (Point A).
5. Locate the Nitrogen equivalent flow rate (sccm Nitrogen) on the vertical line marked " Q_{Nitrogen} " (Point B).
6. Draw a line connecting Dp and Q_{Nitrogen} and extend it to the baseline. Mark this point (Point C).
7. Locate inlet pressure (psia) on the vertical line marked " P_{in} " (Point D).
8. Draw a line connecting P_{in} (Point D) and baseline (Point C) and then extend this line to the vertical line marked D_o (orifice diameter, inches) (Point E).
9. This point on the line is the minimum orifice size for the given conditions. If this point is between two orifice sizes, select the next largest size orifice to ensure adequate flow. If the orifice selected falls below .0013, choose .0013 size orifice.

For the example in Figure 4-4, the .007 size orifice would be selected.

Brooks® Model 5851i

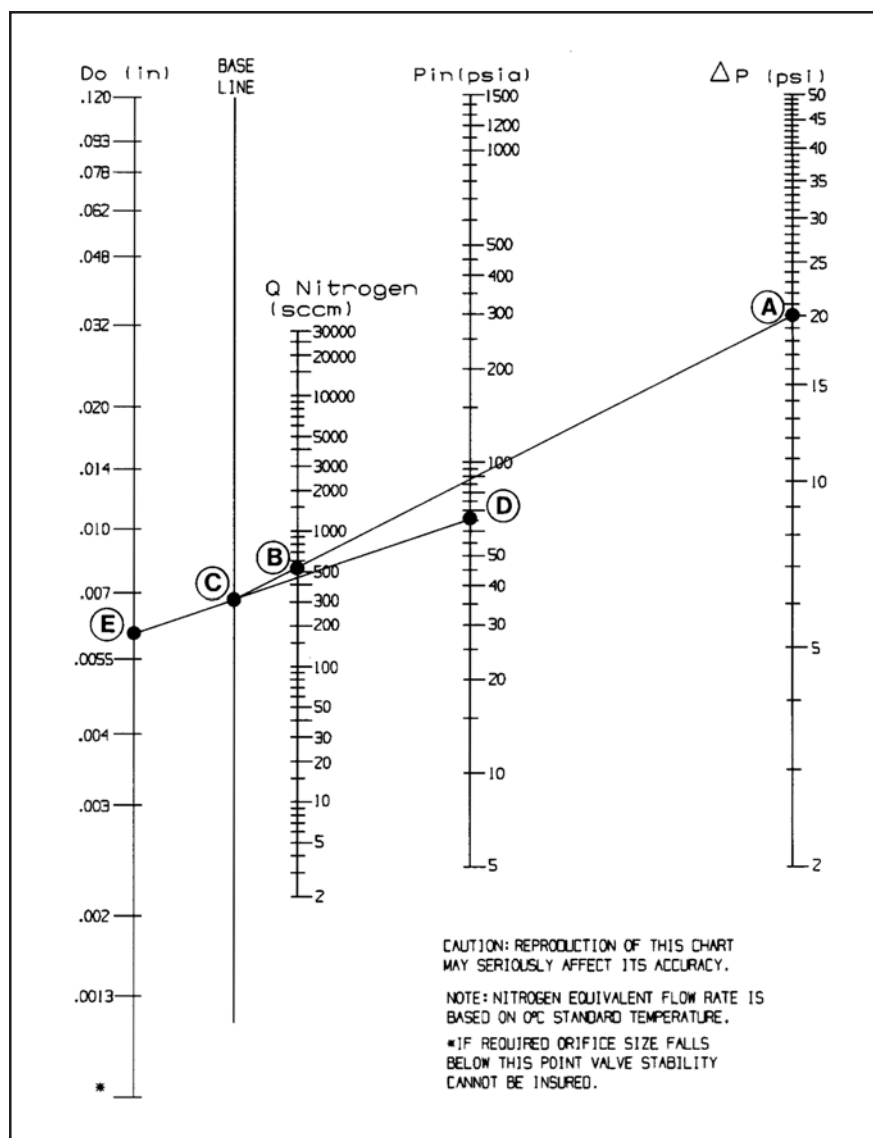


Figure 4-4 Example Nomograph

Table 4-4 5851i Restrictor Selection Guide.


Range slpm Nitrogen Equivalent Flow*	Restrictor Element Combination	Part Number
4.6 to 15	1-40 micron (1 inch)	S-613-E-604-BMT
15 to 26	1-40 micron	S-613-E-636-BMT
26 to 42	2-40 micron	S-613-E-523-BMT
42 to 60	3-40 micron	S-613-E-526-BMT
60 to 79	2-40 micron/1-60 micron	S-613-E-528-BMT
79 to 93	1-40 micron/2-60 micron	S-613-E-529-BMT
93 to 130**	3-60 micron	S-613-E-527-BMT

* Based on 0°C Standard Reference Temperature

** For Hydrogen from 130 slpm to 200 slpm use 3-60 micron restrictor elements.

NOTE: If the nitrogen equivalent flow is between two sizes, select the larger size.

Table 4-5 Model 5851i Orifice Sizing Nomograph

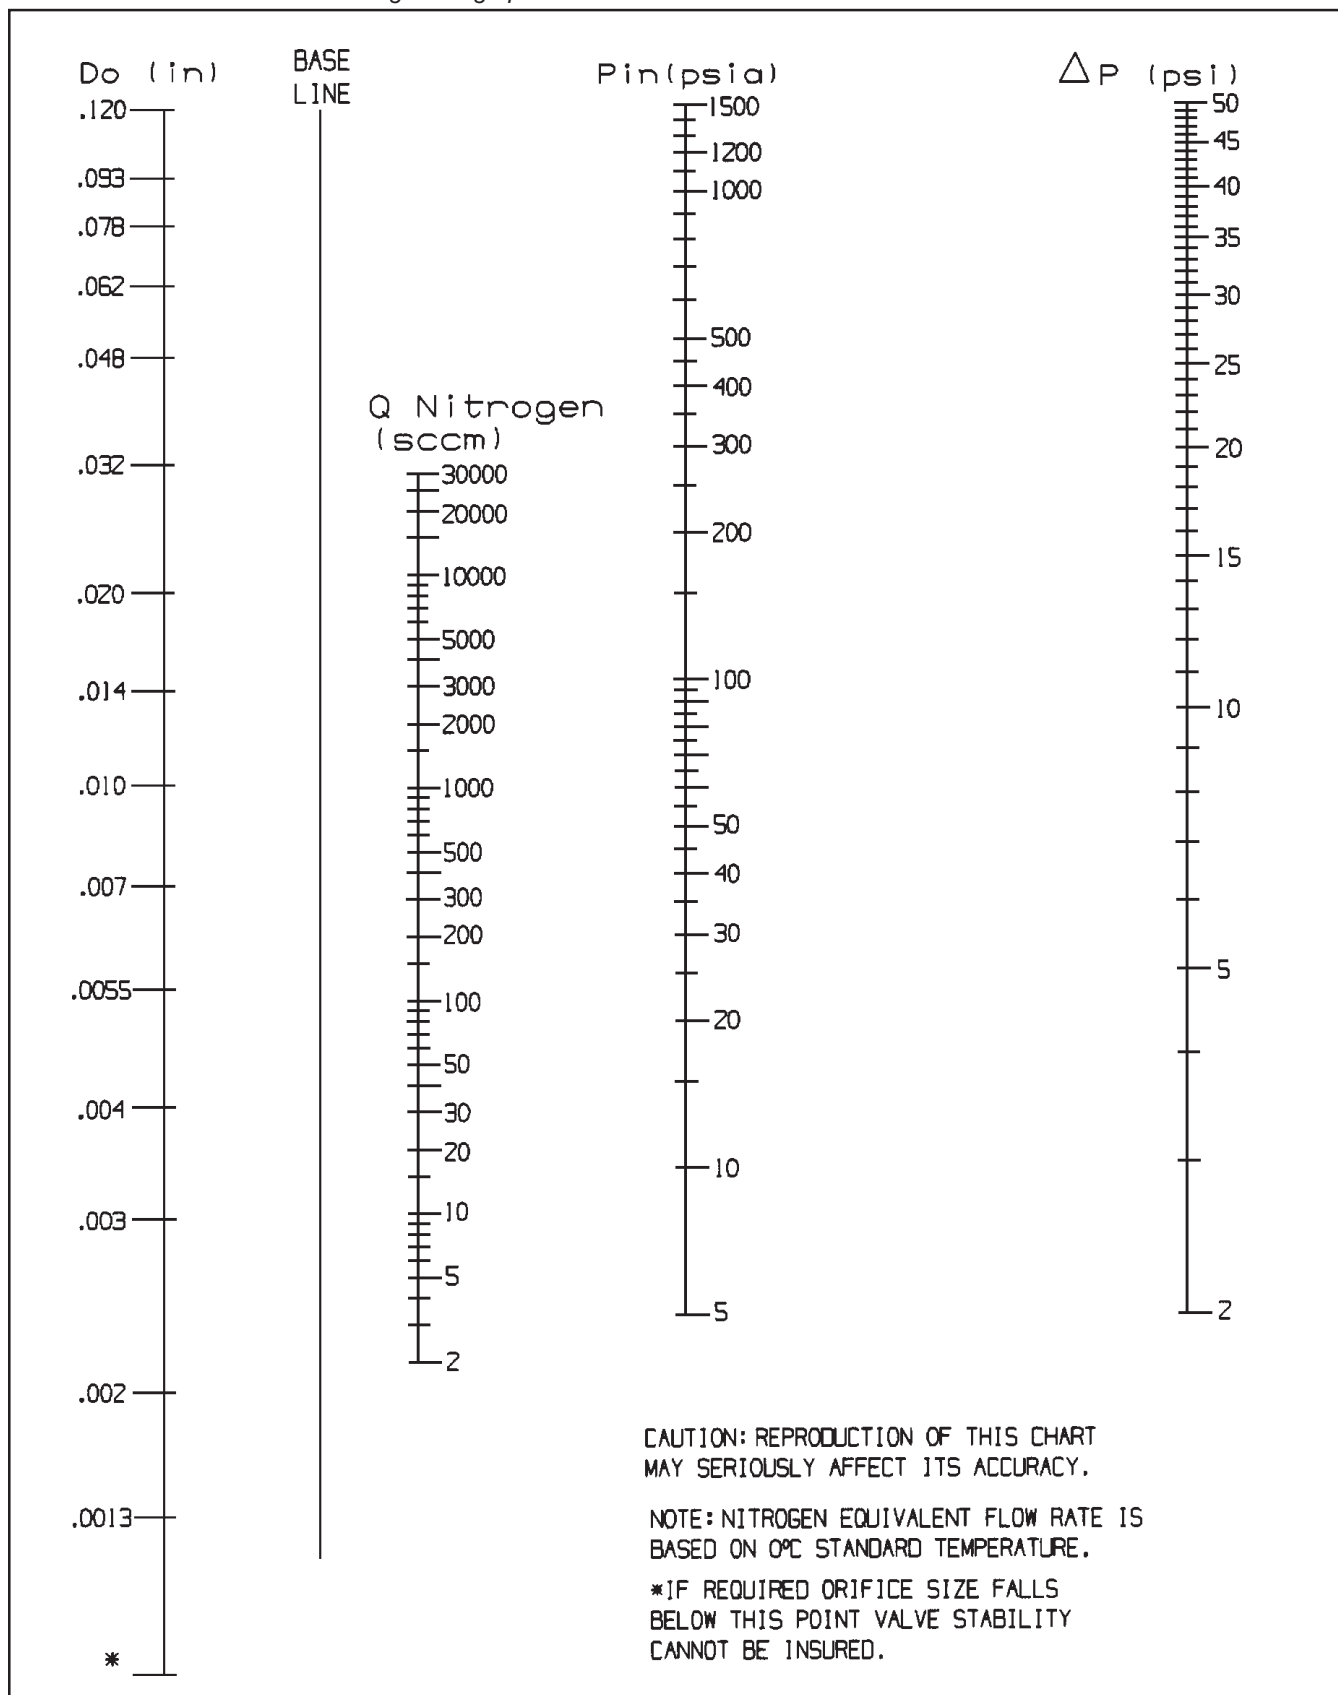

Brooks® Model 5851i

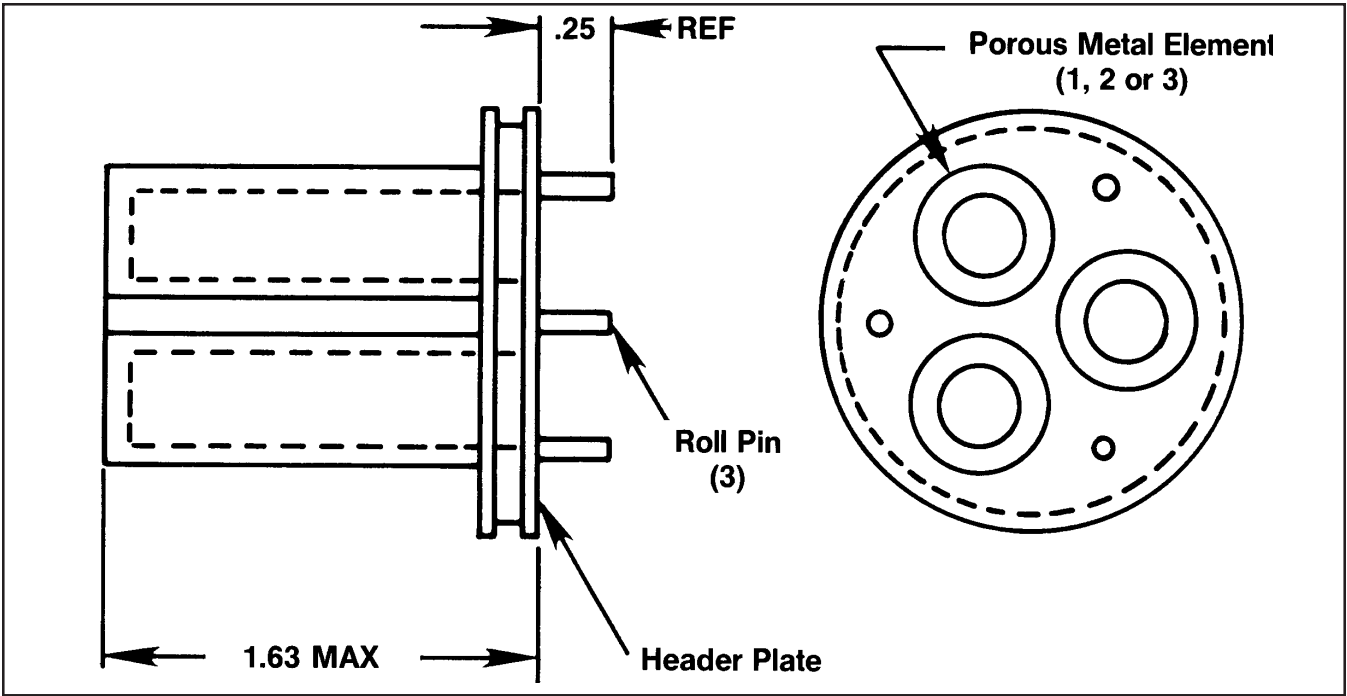


Figure 4-6 Model 5851i Restrictor Element Assembly

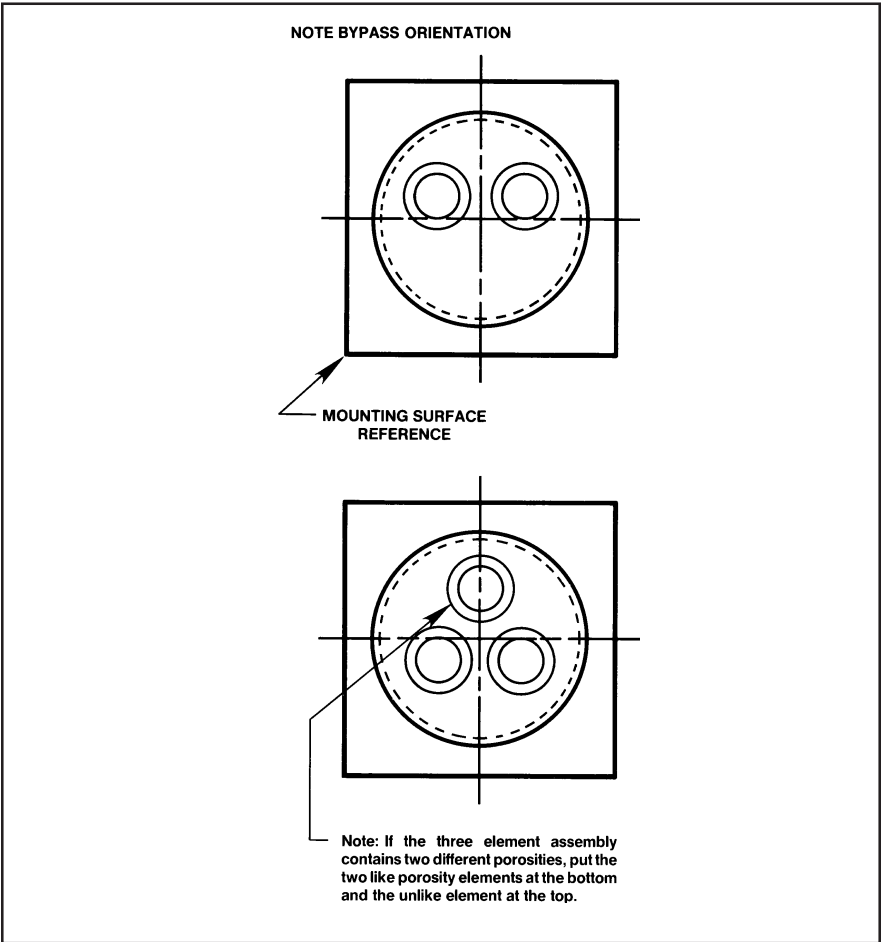


Figure 4-7 Model 5851i Restrictor Element Orientation in Controller Body

4-7 Restrictor Sizing

The restrictor assembly is a ranging device for the sensor portion of the controller. It creates a pressure drop which is linear with flow rate. This diverts a sample quantity of the process gas flow through the sensor. Each restrictor maintains the ratio of sensor flow to restrictor flow, however, the total flow through each restrictor is different. Different restrictors have different pressure drops and produce controllers with different full scale flow rates. For a discussion of the interaction of the various parts of the controller, you are urged to review Section 3-1 "Theory of Operation."

If the restrictor assembly has been contaminated with foreign matter, the pressure drop versus flow characteristics will be altered and it must be cleaned or replaced. It may also be necessary to replace the restrictor assembly when the mass flow controller is to be calibrated to a new flow rate.

Restrictor assembly replacement should be performed only by trained personnel. The tools required for the removal/replacement procedure are as follows:

- Appropriate size hex wrench for the removal of the inlet block.

- Restrictor removal tool may be required (contained in Service Tool Kit P/N S778D017AAA)

- Restrictor O-ring, refer to the spare parts Section 5 for the correct part number.

The 5851*i* Mass Flow Controller utilizes porous metal restrictor assemblies for all full scale flow rates. Restrictor elements with porosities of 40 and 60 microns are used in different combinations. Up to three restrictor elements can be placed in one assembly. These restrictors are assembled by pressing the porous metal elements into the header plate.

When sizing a restrictor assembly for gases other than nitrogen, the sensor conversion factor must be included as the restrictor is used to divert a portion of the process flow through the sensor. Use the following equation to obtain the desired output in nitrogen equivalent units. Refer to Table 4-3 for the conversion factor list.

Example:

The desired gas is cyanogen (C_2N_2).

The desired full scale flow rate is 30 slpm.

Sensor conversion factor is 0.499 from Table 4-3.

Nitrogen equivalent flow = $30/0.499 = 60.1$ slpm Nitrogen.

In the example above, the restrictor should be sized for a 60.1 slpm flow rate (P/N S613E528BMT).

If a restrictor assembly is being replaced because the original has become contaminated, the original may be used as a guide to select the replacement assembly. The porosity of the original element or elements is marked on the calibration sheet which was shipped with the flow controller. The replacement assembly should be replaced in the same orientation as the original restrictor.

Assembly Procedures

1. Select the proper restrictor element combination.
2. When handling restrictor elements, use care to insure that they are not contaminated with dirt, grease, oil, etc. The use of rubber gloves is recommended.
3. Put a lightly lubricated O-ring onto the header plate. The restrictor assembly can then be installed in the mass flow controller body (restrictor element(s) go in first). It is important that the restrictor assembly is put into the body in the correct orientation (Refer to Figure 4-7). Push this assembly in with your fingers. Do not use an arbor press or hammer to install the restrictor assembly. The restrictor assembly should be pushed in until it bottoms out. Do not force it beyond this point.
4. Place the end block O-ring in position and install the end block with the four hex socket screws. Tighten these screws to 49 in./lbs. Do not over-tighten.

⚠ CAUTION

The end block screws (29) and the valve screws (3) are not interchangeable. The end block screws are stronger and are needed to achieve the pressure rating. The end block screws are darker in color and can be attracted by a magnet.

5. Install the inlet adaptor fitting and O-ring.
6. Calibrate the mass flow controller (Refer to Section 3-4). If the TP2 voltage as calculated in the calibration procedure, Section 3-4, step f, is below 1.2 volts, the flow rate will be greater than desired. If this occurs, the restrictor assembly should be replaced with the next lower flow rate assembly. If the TP1 procedure, Section 3-4 step f is greater than 4.5 volts, the flow through the controller will be less than desired. If this occurs, the restrictor assembly should be replaced with the next higher flow rate assembly.


5-1 General

When ordering parts, please specify:

Brooks Serial Number
Model Number
Part Description
Part Number
Quantity

(Refer to Figure 5-1 and Tables 5-1 and 5-2).

Brooks® Model 5851i

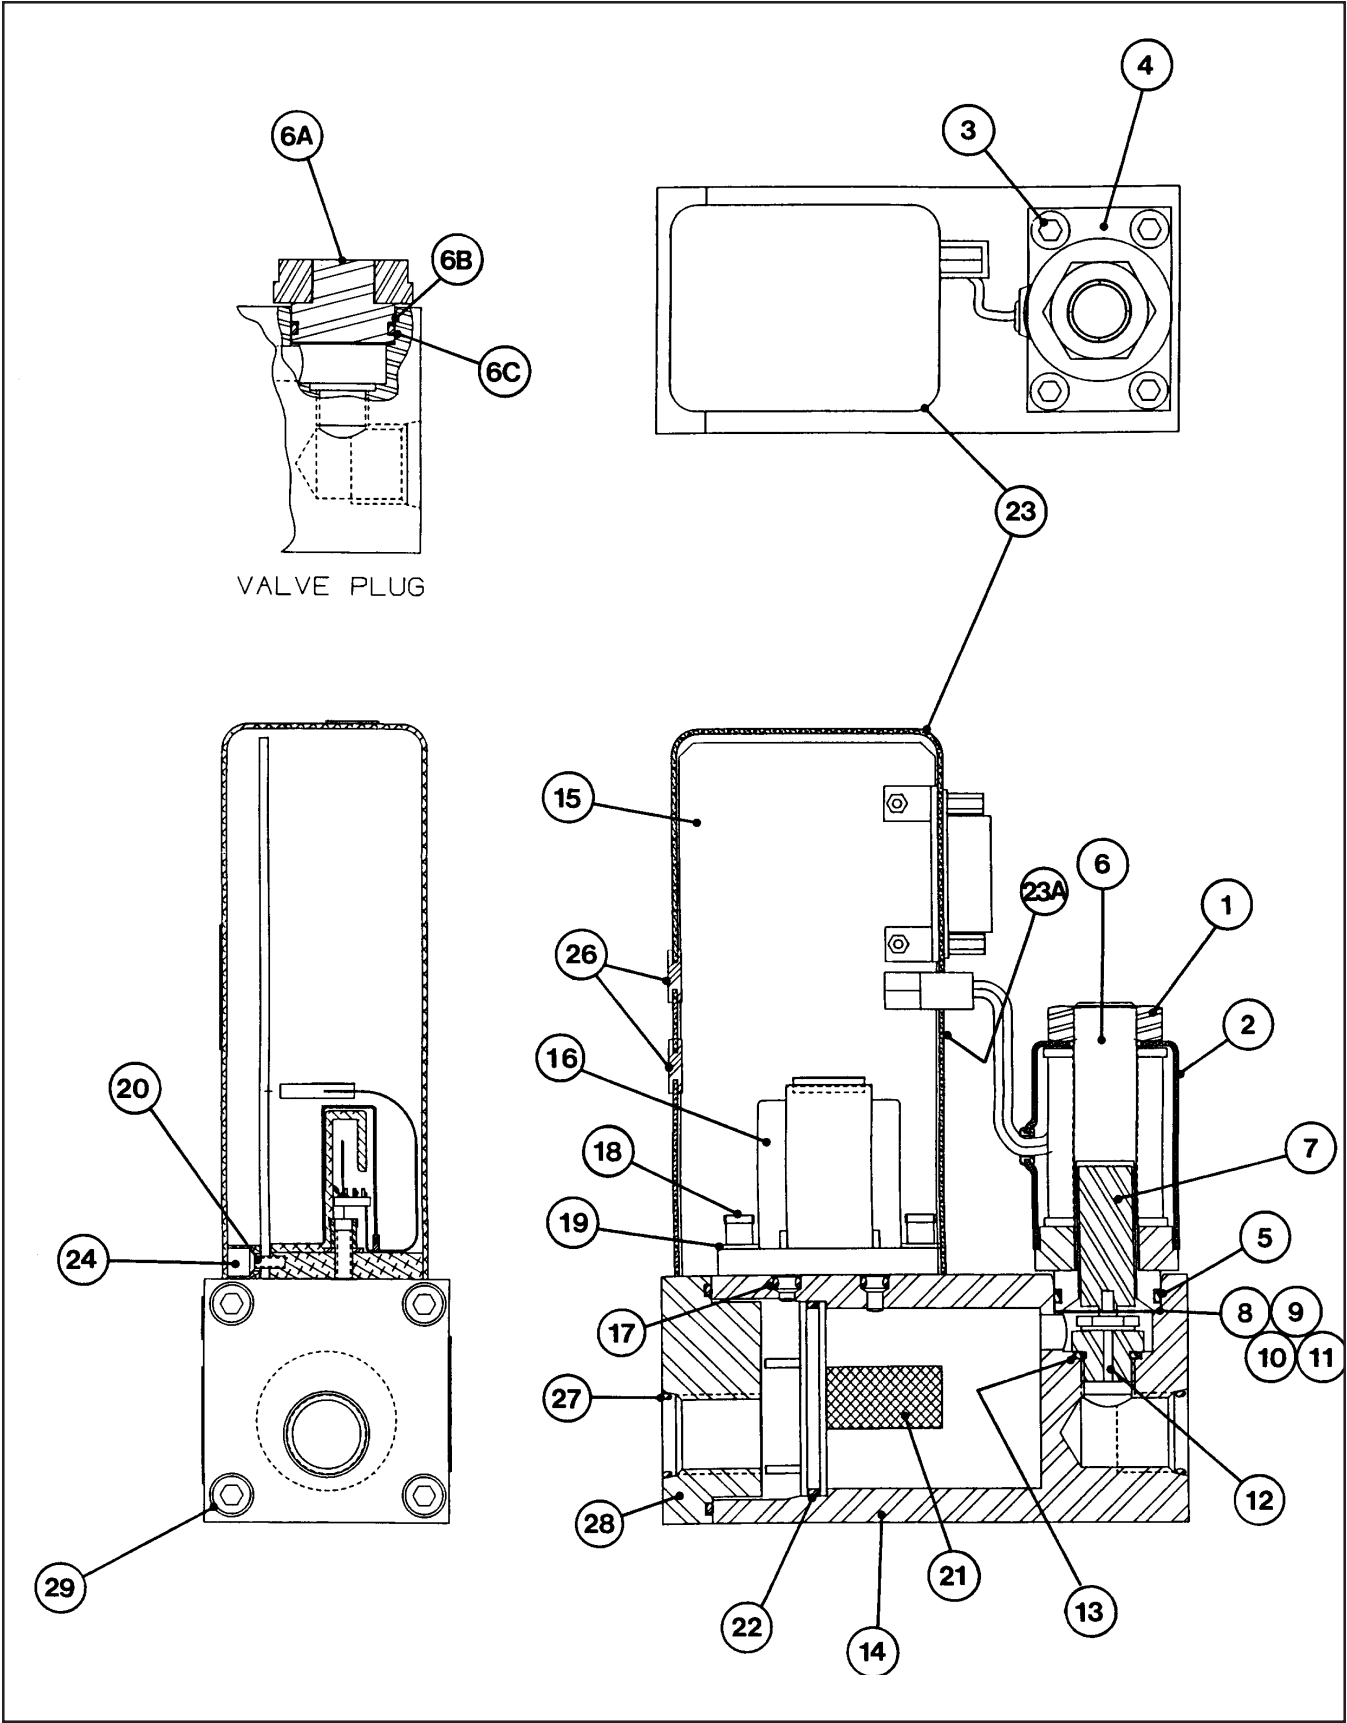

5-2 Figure 5-1 Model 5851i Parts Drawing

Table 5-1 Model 5851i Replacement Parts List (Continued on next page)

Item No.	Quantity	Description		Part Number
1	1	Jam Nut		573B027ACK
2	1	Coil Assembly		S185Z271AAA
3	4	Screw, Valve		751C322AWA
4	1	Retaining Plate		715Z169CZ%
5	1	O-Ring, Valve Stem, Size 016		375B016***
6	1	Valve Stem, High Flow		949Z203QOA
6A	1	Valve Plug		953Z068BMT
6B	1	Valve Ring		763Z064***
6C	1	Valve O-Ring		375B016***
7	1	Valve Plunger Assembly, High Flow		S622Z165AAA
8	1	Lower Guide Spring		820Z083BMA
9	AR	Small Valve Spacer, 0.005" Thick		810A362BMA
		Small Valve Spacer, 0.010" Thick		810A363BMA
10	AR	Large Valve Spacer, 0.005" Thick		810A368BMA
		Large Valve Spacer, 0.010" Thick		810A361BMA
11	1	Valve Seat with Viton™ Insert		S715Z051AAG
		Valve Seat with Buna Insert		S715Z050AAG
		Valve Seat with Kalrez™ Insert		S715Z163AAA
		Valve Seat Solid 316 Stainless Steel		715Z181BNT
12	1	Orifice, Stainless Steel (Refer to Section 4-6 for sizing)	ID 0.0040"	577Z275BMT
			ID 0.0067"	577Z277BMT
			ID 0.0091"	577Z280BMT
			ID 0.0120"	577Z283BMT
			ID 0.0160"	577Z286BMT
			ID 0.0210"	577Z289BMT
			ID 0.0260"	577Z293BMT
			ID 0.0310"	577Z296BMT
			ID 0.0360"	577Z300BMT
			ID 0.0410"	577Z305BMT
			ID 0.0465"	577Z308BMT
			ID 0.0550"	577Z310BMT
			ID 0.0635"	577Z312BMT
			ID 0.0700"	577Z314BMT
			ID 0.0760"	577Z316BMT
			ID 0.0820"	577Z319BMT
			ID 0.0935"	577Z322BMT
			ID 0.1065"	577Z328BMT
			ID 0.1200"	577Z333BMT
			ID 0.1405"	577C336BMT
13	1	O-Ring, Orifice, Size 0011		375B011***
14	1	Controller Body		S854Z157BMA
15	1	PC Board Assembly (D-Connector)		S097Y901AAA
16	1	Sensor Assembly		S774Z607AAA
17	2	O-Ring, Sensor, Size 004		375B004***
18	2	Allen Nut, Sensor-Body		753Q103ACZ
19	2	Lock Washer, Sensor		962D005AWA
20	5	Screw, Sensor-PC, Board-Cover		753L056AWZ
21	1	Restrictor Assembly and Components (Refer to Section 4-7 for sizing)		
22	1	O-Ring, Restrictor, Size 026		375B026***
23	1	Electronics Cover Can (D-Connector)		219Z431EA%
23A	1	Cover Plate (D-Connector)		852Z209EA%
24	1	PC Board Mounting Bracket		079Z135EAA
26	2	Pot Hole Plug		620Z434SXA

*** QTA = Viton™, SUA = Buna, TTA = Kalrez™

AR As required, NS Not Shown

Brooks® Model 5851i

Table 5-1 Model 5851i Replacement Parts List (Continued)

Item No.	Quantity	Description	Part Number
NS	2	Fitting, 1/4" Compression, Swagelok	320B136BMA
		Fitting, 1/4" Male VCR, Cajon	315Z036BMA
		Fitting, 1/4" Male VCO, Cajon	315Z035BMA
		Fitting, 3/8" Compression	320B150BMA
		Fitting, 3/8" Male VCO (3/8" or 1/2" Tube)	315Z033BMA
		Fitting, 3/8" Male VCR (3/8" or 1/2" Tube)	315Z034BMA
27	2	O-Ring, Fitting, Size 906	375B906***
NS	2	O-Ring, VCO Gland, Size 010	375B010***
NS	1	O-Ring, End Block, Size 029	375B029***
NS	1	Interconnecting Cables D-Connector on one end with no termination on the other end	Length
			D-Connector
			5 Feet
			10 Feet
			25 Feet
			50 Feet
NS	2	8-32 Mounting Screw	Customer Supplied
28	1	End Block with Integral Inlet Screen	S079Z200AAA
29	4	Screw, End Block	751Z105AAO

*** QTA = Viton, SUA = Buna, TTA = Kalrez

AR As required, NS Not Shown

Table 5-2 Tool and Spare Part Kits for 5850 Series

<p>5850/5851 Series Service Tool Kit P/N S778D017AAA</p> <p>Permits the complete disassembly of the 5850i for servicing</p> <p>Contains:</p> <ul style="list-style-type: none"> 1 — O-Ring Removal Tool 1 — Potentiometer Adjustment Tool 1 — Ball Point Allen Wrench 1 — Phillips Screw Driver 1 — Nut Driver for Orifice 1 — Restrictor Removal Tool 1 — Common Screw Driver 	<p>5851 Header Removal Tool P/N S817Z036AAA</p> <p>0550/5851 Orifice Removal Tool P/N S908Z049AAA</p>
<p>5850/5851 Series Break Out Board Assembly P/N S273Z668AAA</p> <p>Installs directly between mass flow controller and interconnecting cable. Allows convenient access to all signals for easy troubleshooting of system.</p> <p>Contains:</p> <ul style="list-style-type: none"> 1 — Break Out PC Board 1 — 5 Foot Extension Cable 1 — Terminal PC Board 	<p>5850/5851 Series Valve Shim Kit P/N S810A372BMA</p> <p>Contains:</p> <ul style="list-style-type: none"> 1 — .010" Large Spacer 2 — .005" Large Spacers 1 — .010" Small Spacer 2 — .005" Small Spacers

*** QTA = Viton, SUA = Buna, TTA = Kalrez

NOTE: Refer to Brooks' publication DS-5800 for additional accessories.

Additional publications available:
T-086 MFC Contamination Control in Semiconductor Processing
Equipment Valve Application Guide/Service Manual

Dansk

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Emne : Tillæg til instruktions manual.
Reference : CE mærkning af Masse Flow udstyr
Dato : Januar-1996.

Brooks Instrument har gennemført CE mærkning af elektronisk udstyr med succes, i henhold til regulativet om elektrisk støj (EMC direktivet 89/336/EEC).

Der skal dog gøres opmærksom på benyttelsen af signalkabler i forbindelse med CE mærkede udstyr.

Kvaliteten af signal kabler og stik:

Brooks lever kabler af høj kvalitet, der imødekommer specifikationerne til CE mærkning.

Hvis der anvendes andre kabel typer skal der benyttes et skærmet kabel med hel skærm med 100% dækning.

Forbindelses stikket type "D" eller "cirkulære", skal være skærmet med metalhus og eventuelle PG-forskrutninger skal enten være af metal eller metal skærmet.

Skærmen skal forbindes, i begge ender, til stikkets metalhus eller PG-forskrutningen og have forbindelse over 360 grader.

Skærmen bør være forbundet til jord.

"Card Edge" stik er standard ikke af metal, der skal derfor ligeledes benyttes et skærmet kabel med hel skærm med 100% dækning.

Skærmen bør være forbundet til jord.

Forbindelse af stikket; venligst referer til vedlagte instruktions manual.

Med venlig hilsen,

Deutsch

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Subject : Nachtrag zur Bedienungsanleitung.
Referenz : CE Zertifizierung für Massedurchflußgeräte
Datum : Januar-1996.

Nach erfolgreichen Tests entsprechend den Vorschriften der Elektromagnetischen Verträglichkeit (EMC Richtlinie 89/336/EEC) erhalten die Brooks-Geräte (elektrische/elektronische Komponenten) das CE-Zeichen.

Bei der Auswahl der Verbindungskabel für CE-zertifizierte Geräte sind spezielle Anforderungen zu beachten.

Qualität der Verbindungskabel, Anschlußstecker und der Kabeldurchführungen

Die hochwertigen Qualitätskabel von Brooks entsprechen der Spezifikation der CE-Zertifizierung.

Bei Verwendung eigener Verbindungskabel sollten Sie darauf achten, daß eine 100 %igen Schirmabdeckung des Kabels gewährleistet ist.

"D" oder "Rund" -Verbindungsstecker sollten eine Abschirmung aus Metall besitzen.

Wenn möglich, sollten Kabeldurchführungen mit Anschlußmöglichkeiten für die Kabelabschirmung verwendet werden.

Die Abschirmung des Kabels ist auf beiden Seiten des Steckers oder der Kabeldurchführungen über den vollen Umfang von 360 ° anzuschließen.

Die Abschirmung ist mit dem Erdpotential zu verbinden.

Platinen-Steckverbindungen sind standardmäßige keine metallgeschirmten Verbindungen. Um die Anforderungen der CE-Zertifizierung zu erfüllen, sind Kabel mit einer 100 %igen Schirmabdeckung zu verwenden.

Die Abschirmung ist mit dem Erdpotential zu verbinden.

Die Belegung der Anschlußpins können Sie dem beigelegten Bedienungshandbuch entnehmen.

Brooks® Model 5851i

English

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Subject : Addendum to the Instruction Manual.
Reference : CE certification of Mass Flow Equipment
Date : January-1996.

The Brooks (electric/electronic) equipment bearing the CE mark has been successfully tested to the regulations of the Electro Magnetic Compatibility (EMC directive 89/336/EEC).

Special attention however is required when selecting the signal cable to be used with CE marked equipment.

Quality of the signal cable, cable glands and connectors:

Brooks supplies high quality cable(s) which meets the specifications for CE certification.

If you provide your own signal cable you should use a cable which is overall completely screened with a 100% shield.

"D" or "Circular" type connectors used should be shielded with a metal shield. If applicable, metal cable glands must be used providing cable screen clamping.

The cable screen should be connected to the metal shell or gland and shielded at both ends over 360 Degrees.

The shield should be terminated to a earth ground.

Card Edge Connectors are standard non-metallic. The cables used must be screened with 100% shield to comply with CE certification.

The shield should be terminated to a earth ground.

For pin configuration : Please refer to the enclosed Instruction Manual.

Español

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Asunto : Addendum al Manual de Instrucciones.
Referencia : Certificación CE de los Equipos de Caudal Máscico
Fecha : Enero-1996.

Los equipos de Brooks (eléctricos/electrónicos) en relación con la marca CE han pasado satisfactoriamente las pruebas referentes a las regulaciones de Compatibilidad Electro magnética (EMC directiva 89/336/EEC).

Sin embargo se requiere una atención especial en el momento de seleccionar el cable de señal cuando se va a utilizar un equipo con marca CE

Calidad del cable de señal, prensaestopas y conectores:

Brooks suministra cable(s) de alta calidad, que cumple las especificaciones de la certificación CE .

Si usted adquiere su propio cable de señal, debería usar un cable que esté completamente protegido en su conjunto con un apantallamiento del 100%.

Cuando utilice conectores del tipo "D" ó "Circular" deberían estar protegidos con una pantalla metálica. Cuando sea posible, se deberán utilizar prensaestopas metálicos provistos de abrazadera para la pantalla del cable.

La pantalla del cable deberá ser conectada al casquillo metálico ó prensa y protegida en ambos extremos completamente en los 360 Grados.

La pantalla deberá conectarse a tierra.

Los conectores estandar de tipo tarjeta (Card Edge) no son metálicos, los cables utilizados deberán ser protegidos con un apantallamiento del 100% para cumplir con la certificación CE.

La pantalla deberá conectarse a tierra.

Para ver la configuración de los pines: Por favor, consultar Manual de Instrucciones adjunto.

Français

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Sujet : Annexe au Manuel d'Instructions.
Référence : Certification CE des Débitmètres Massiques à Effet Thermique.
Date : Janvier 1996.

Messieurs,

Les équipements Brooks (électriques/électroniques) portant le label CE ont été testés avec succès selon les règles de la Compatibilité Electromagnétique (directive CEM 89/336/EEC).

Cependant, la plus grande attention doit être apportée en ce qui concerne la sélection du câble utilisé pour véhiculer le signal d'un appareil portant le label CE.

Qualité du câble, des presse-étoupes et des connecteurs:

Brooks fournit des câbles de haute qualité répondant aux spécifications de la certification CE.

Si vous approvisionnez vous-même ce câble, vous devez utiliser un câble blindé à 100 %.

Les connecteurs « D » ou de type « circulaire » doivent être reliés à la terre.

Si des presse-étoupes sont nécessaires, ceux ci doivent être métalliques avec mise à la terre.

Le blindage doit être raccordé aux connecteurs métalliques ou aux presse-étoupes sur le pourtour complet du câble, et à chacune de ses extrémités.

Tous les blindages doivent être reliés à la terre.

Les connecteurs de type « card edge » sont non métalliques. Les câbles utilisés doivent être blindés à 100% pour satisfaire à la réglementation CE.

Tous les blindages doivent être reliés à la terre.

Se référer au manuel d'instruction pour le raccordement des contacts.

Greek

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Θέμα : Προσθήκη στο Εγχειρίδιο Οδηγιών.
Σχετικά : Πιστοποίηση CE των Οργάνων Μέτρησης Παροχής Μάζας.
Ημερομηνία : Ιανουάριος - 1996

Κυρίες και Κύριοι,

Τα όργανα (ηλεκτρικά/ηλεκτρονικά) της Brooks τα οποία φέρουν το σήμα CE έχουν επιτυχώς ελεγχθεί σύμφωνα με τους κανονισμούς της Ηλεκτρο-Μαγνητικής Συμβατότητας (EMC ντιρεκτίβα 89/336/EEC).

Οπωσδήποτε χρειάζεται ειδική προσοχή κατά την επιλογή του καλωδίου μεταφοράς του σήματος το οποίο (καλώδιο) πρόκειται να χρησιμοποιηθεί με όργανα που φέρουν το σήμα CE.

Ποιότητα του καλωδίου σήματος των συσπιοθλιπτών και των συνδέσεων.

Η Brooks κατά κανόνα προμηθεύει υψηλής ποιότητας καλώδια τα οποία πληρούν τις προδιαγραφές για πιστοποίηση CE.

Εάν η επιλογή του καλωδίου σήματος γίνει από σας πρέπει να χρησιμοποιήσετε καλώδιο το οποίο να φέρει εξωτερικά πλήρες πλέγμα και να παρέχει θωράκιση 100%.

Οι σύνδεσμοι τύπου "D" ή "Κυκλικοί" των καλωδίων, πρέπει να θωρακίζονται με μεταλλική θωράκιση. Εάν είναι εφαρμόσιμο, πρέπει να χρησιμοποιούνται μεταλλικοί συσπιοθλιπτες καλωδίων που να διαθέτουν ακροδέκτη σύνδεσης του πλέγματος του καλωδίου.

Το πλέγμα του καλωδίου πρέπει να συνδέεται στο μεταλλικό περιβλήμα ή στον συσπιοθλιπτή και να θωρακίζεται και στα δύο άκρα κατά 360 μοίρες. Η θωράκιση πρέπει να καταλήγει σε κάποιο ακροδέκτη γείωσης.

Οι σύνδεσμοι καρτών είναι μη-μεταλλικοί, τα καλώδια που χρησιμοποιούνται πρέπει να φέρουν πλέγμα θωράκισης 100% για να υπακούουν στην πιστοποίηση CE. Η θωράκιση πρέπει να καταλήγει σε κάποιο ακροδέκτη γείωσης.

Για την διάταξη των ακροδεκτών: Παρακαλούμε αναφερθείτε στο εσώκλειστο Εγχειρίδιο Οδηγιών.

Brooks® Model 5851i

Italiano

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Oggetto : Addendum al manuale di istruzioni.

Riferimento : Certificazione CE dei misuratori termici di portata in massa

Data : Gennaio 1996.

Questa strumentazione (elettrica ed elettronica) prodotta da Brooks Instrument, soggetta a marcatura CE, ha superato con successo le prove richieste dalla direttiva per la Compatibilità Elettromagnetica (Direttiva EMC 89/336/EEC).

E' richiesta comunque una speciale attenzione nella scelta dei cavi di segnale da usarsi con la strumentazione soggetta a marchio CE.

Qualità dei cavi di segnale e dei relativi connettori:

Brooks fornisce cavi di elevata qualità che soddisfano le specifiche richieste dalla certificazione CE. Se l'utente intende usare propri cavi, questi devono possedere una schermatura del 100%.

I connettori sia di tipo "D" che circolari devono possedere un guscio metallico. Se esiste un passacavo esso deve essere metallico e fornito di fissaggio per lo schermo del cavo.

Lo schermo del cavo deve essere collegato al guscio metallico in modo da schermarlo a 360° e questo vale per entrambe le estremità.

Lo schermo deve essere collegato ad un terminale di terra.

I connettori "Card Edge" sono normalmente non metallici. Il cavo impiegato deve comunque avere una schermatura del 100% per soddisfare la certificazione CE.

Lo schermo deve essere collegato ad un terminale di terra.

Per il corretto cablaggio dei terminali occorre fare riferimento agli schemi del manuale di istruzioni dello strumento.

Nederlands

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Onderwerp : Addendum voor Instructie Handboek

Referentie : CE certificering voor Mass Flow Meters & Controllers

Datum : Januari 1996

Dames en heren,

Alle CE gemarkeerde elektrische en elektronische producten van Brooks Instrument zijn met succes getest en voldoen aan de wetgeving voor Electro Magnetische Compatibiliteit (EMC wetgeving volgens 89/336/EEC).

Speciale aandacht is echter vereist wanneer de signaalkabel gekozen wordt voor gebruik met CE gemarkeerde producten.

Kwaliteit van de signaalkabel en kabelaan sluitingen:

- Brooks levert standaard kabels met een hoge kwaliteit, welke voldoen aan de specificaties voor CE certificering.

Indien men voorziet in een eigen signaalkabel, moet er gebruik gemaakt worden van een kabel die volledig is afgeschermd met een bedekkingsgraad van 100%.

- "D" of "ronde" kabelconnectoren moeten afgeschermd zijn met een metalen connector kap. Indien kabelwartels worden toegepast, moeten metalen kabelwartels worden gebruikt die het mogelijk maken het kabelscherm in te klemmen.
Het kabelscherm moet aan beide zijden over 360° met de metalen connectorkap, of wartel verbonden worden. Het scherm moet worden verbonden met aarde.
- "Card-edge" connectors zijn standaard niet-metallisch. De gebruikte kabels moeten volledig afgeschermd zijn met een bedekkingsgraad van 100% om te voldoen aan de CE certificering.
Het scherm moet worden verbonden met aarde.

Voor pin-configuraties a.u.b. verwijzen wij naar het bijgesloten instructie handboek.

Hoogachtend,

Norsk

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Vedrørende : Vedlegg til håndbok
Referanse : CE sertifisering av utstyr for massestrømsmåling og regulering
Dato : Januar 1996

Til den det angår

Brooks Instrument elektrisk og elektronisk utstyr påført CE-merket har gjennomgått og bestått prøver som beskrevet i EMC forskrift om elektromagnetisk immunitet, direktiv 89/336/EEC.
For å opprettholde denne klassifisering er det av stor viktighet at riktig kabel velges for tilkobling av det måletekniske utstyret.

Utførelse av signalkabel og tilhørende plugger:

- Brooks Instrument tilbyr levert med utstyret egnet kabel som møter de krav som stilles til CE-sertifisering.
 - Dersom kunden selv velger kabel, må kabel med fullstendig, 100% skjerming av lederene benyttes. "D" type og runde plugger og forbindelser må være utført med kappe i metall og kabelnipler må være utført i metall for jordet innfesting av skjermen. Skjermen i kabelen må tilknyttes metallet i pluggen eller nippelen i begge ender over 360°, tilkoblet elektrisk jord.
 - Kort-kantkontakter er normalt utført i kunststoff. De tilhørende flatkabler må være utført med fullstendig, 100% skjerming som kobles til elektrisk jord på riktig pinne i pluggen, for å møte CE sertifiseringskrav. For tilkobling av medleverte plugger, vennligst se håndboken som hører til utstyret.
- Vennlig hilsen

Português

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Assunto : Adenda ao Manual de Instruções
Referência : Certificação CE do Equipamento de Fluxo de Massa
Data : Janeiro de 1996.

O equipamento (eléctrico/electrónico) Brooks com a marca CE foi testado com êxito nos termos do regulamento da Compatibilidade Electromagnética (directiva CEM 89/336/EEC).

Todavia, ao seleccionar-se o cabo de sinal a utilizar com equipamento contendo a marca CE, será necessário ter uma atenção especial.

Qualidade do cabo de sinal, buchas de cabo e conectores:

A Brooks fornece cabo(s) de qualidade superior que cumprem os requisitos da certificação CE.

Se fornecerem o vosso próprio cabo de sinal, devem utilizar um cabo que, na sua totalidade, seja isolado com uma blindagem de 100%.

Os conectores tipo "D" ou "Circulares" devem ser blindados com uma blindagem metálica. Se tal for necessário, deve utilizar-se buchas metálicas de cabo para o isolamento do aperto do cabo.

O isolamento do cabo deve ser ligado à blindagem ou bucha metálica em ambas as extremidades em 360°.

A blindagem deve terminar com a ligação à massa.

Os conectores "Card Edge" não são, em geral, metálicos e os cabos utilizados devem ter um isolamento com blindagem a 100% nos termos da Certificação CE..

A blindagem deve terminar com ligação à massa.

Relativamente à configuração da cavilha, queiram consultar o Manual de Instruções.

Brooks® Model 5851i

Suomi

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Asia : Lisäys Käyttöohjeisiin
Viite : Massamäärämittareiden CE sertifiointi
Päivämäärä : Tammikuu 1996

Brooksin CE merkillä varustetut sähköiset laitteet ovat läpäissyt EMC testit (direktiivi 89/336/EEC).

Erityistä huomiota on kuitenkin kiinnitettävä signaalikaapelin valintaan.

Signaalikaapelin, kaapelin läpiviennin ja liittimen laatu

Brooks toimittaa korkealaatuisia kaapeleita, jotka täyttävät CE sertifikaatin vaatimukset. Hankkiessaan signaalikaapelin itse, olisi hankittava 100%:sti suojattu kaapeli.

“D” tai “Circular” tyyppisen liittimen tulisi olla varustettu metallisuojaalla. Mikäli mahdollista, tulisi käyttää metallisia kaapeliliittimiä kiinnitettäessä suoja.

Kaapelin suoja tulisi olla liitetty metallisuojaan tai liitimeen molemmissa päissä 360°:n matkalta.

Suojan tulisi olla maadoitettu.

“Card Edge Connector”it ovat standarditoimituksina ei-metallisia. Kaapeleiden täytyy olla 100%: sesti suojattuja jotta ne olisivat CE sertifikaatin mukaisia.

Suoja on oltava maadoitettu.

Nastojen liittäminen; katso liitteenä oleva manuaali.

Ystävällisin terveisin,

Svensk

Brooks Instrument
407 West Vine St.
Hatfield, PA 19440
U.S.A.

Subject : Addendum to the Instruction Manual
Reference : CE certification of Mass Flow Equipment
Date : January 1996

Brooks (elektriska / elektronik) utrustning, som är CE-märkt, har testats och godkänts enligt gällande regler för elektromagnetisk kompatibilitet (EMC direktiv 89/336/EEC).

Speciell hänsyn måste emellertid tas vid val av signalkabel som ska användas tillsammans med CE-märkt utrustning.

Kvalitet på signalkabel och anslutningskontakter:

Brooks levererar som standard, kablar av hög kvalitet som motsvarar de krav som ställs för CE-godkännande.

Om man använder en annan signalkabel ska kabeln i sin helhet vara skärmad till 100%.

“D” eller “runda” typer av anslutningskontakter ska vara skärmade. Kabelgenomföringar ska vara av metall alternativt med metalliserad skärmning.

Kabelns skärm ska, i bada ändar, vara ansluten till kontakternas metallkåpor eller genomföringar med 360 graders skärmning.

Skärmen ska avslutas med en jordförbindelse.

Kortkontakter är som standard ej metalliserade, kablar som används måste vara 100% skärmade för att överensstämja med CE-certifieringen.

Skärmen ska avslutas med en jordförbindelse.

För elektrisk anslutning till kontaktstiften hänvisas till medföljande instruktionsmanual.

*THIS PAGE WAS
INTENTIONALLY
LEFT BLANK*

Brooks® Model 5851i**LIMITED WARRANTY**

Seller warrants that the Goods manufactured by Seller will be free from defects in materials or workmanship under normal use and service and that the Software will execute the programming instructions provided by Seller until the expiration of the earlier of twelve (12) months from the date of initial installation or eighteen (18) months from the date of shipment by Seller. Products purchased by Seller from a third party for resale to Buyer ("Resale Products") shall carry only the warranty extended by the original manufacturer.

All replacements or repairs necessitated by inadequate preventive maintenance, or by normal wear and usage, or by fault of Buyer, or by unsuitable power sources or by attack or deterioration under unsuitable environmental conditions, or by abuse, accident, alteration, misuse, improper installation, modification, repair, storage or handling, or any other cause not the fault of Seller are not covered by this limited warranty, and shall be at Buyer's expense.

Goods repaired and parts replaced during the warranty period shall be in warranty for the remainder of the original warranty period or ninety (90) days, whichever is longer. This limited warranty is the only warranty made by Seller and can be amended only in a writing signed by an authorized representative of Seller.

BROOKS SERVICE AND SUPPORT

Brooks is committed to assuring all of our customers receive the ideal flow solution for their application, along with outstanding service and support to back it up. We operate first class repair facilities located around the world to provide rapid response and support. Each location utilizes primary standard calibration equipment to ensure accuracy and reliability for repairs and recalibration and is certified by our local Weights and Measures Authorities and traceable to the relevant International Standards.

Visit www.BrooksInstrument.com to locate the service location nearest to you.

START-UP SERVICE AND IN-SITU CALIBRATION

Brooks Instrument can provide start-up service prior to operation when required.

For some process applications, where ISO-9001 Quality Certification is important, it is mandatory to verify and/or (re)calibrate the products periodically. In many cases this service can be provided under in-situ conditions, and the results will be traceable to the relevant international quality standards.

CUSTOMER SEMINARS AND TRAINING

Brooks Instrument can provide customer seminars and dedicated training to engineers, end users and maintenance persons.

Please contact your nearest sales representative for more details.

HELP DESK

In case you need technical assistance:

Americas ☎ 1-888-554-FLOW

Europe ☎ +(31) 318 549 290 Within Netherlands ☎ 0318 549 290

Asia ☎ +011-81-3-5633-7100

Due to Brooks Instrument's commitment to continuous improvement of our products, all specifications are subject to change without notice.

**TRADEMARKS**

Brooks Brooks Instrument, LLC
 Fomblin Ausimont
 Freon E. I. DuPont de Nemours & Co.
 Hastelloy Haynes International
 Kalrez DuPont Dow Elastomers

Monel Inco Alloys International Inc.
 VCO Cajon Company
 VCR Cajon Company
 Viton DuPont Performance Elastomers
 Vol-U-Meter Brooks Instrument, LLC

Brooks Instrument
 407 West Vine Street
 P.O. Box 903
 Hatfield, PA 19440-0903 USA
 T (215) 362-3700
 F (215) 362-3745
 E-Mail BrooksAm@BrooksInstrument.com
www.BrooksInstrument.com

Brooks Instrument
 Neonstraat 3
 6718 WX Ede, Netherlands
 T 31-318-549-300
 F 31-318-549-309
 E-Mail BrooksEu@BrooksInstrument.com

Brooks Instrument
 1-4-4 Kitasuna Koto-Ku
 Tokyo, 136-0073 Japan
 T 011-81-3-5633-7100
 F 011-81-3-5633-7101
 E-Mail BrooksAs@BrooksInstrument.com

BROOKS®
 INSTRUMENT